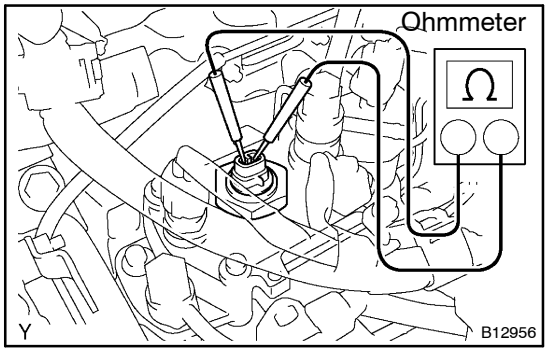


ENGINE SPEED SENSOR

ED03F–03

INSPECTION

INSPECT ENGINE SPEED SENSOR

(a) Disconnect the engine speed sensor connector.

(b) Using an ohmmeter, measure the resistance between the terminals.

Resistance: 205 – 255 Ω at 20°C (68°F)

If the resistance is not specified, replace the injection pump assembly (See page FU–11).

(c) Reconnect the engine speed sensor connector.