
FI020–02

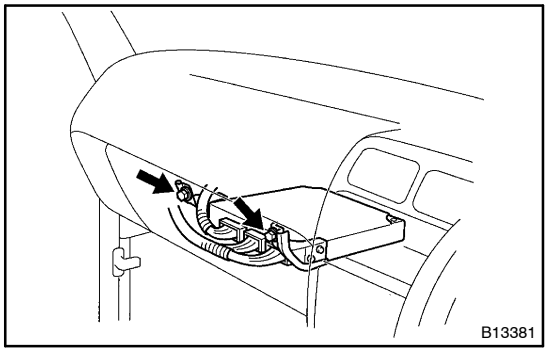

REMOVAL

1. REMOVE GLOVE COMPARTMENT DOOR

2. REMOVE LOWER FINISH NO. 2 PANEL

3. REMOVE ENGINE ECU

(a) Disconnect the 4 engine ECU connector.

(b) Remove the 2 bolts and engine ECU.