


CYLINDER HEAD

COMPONENTS

EM1MI–01

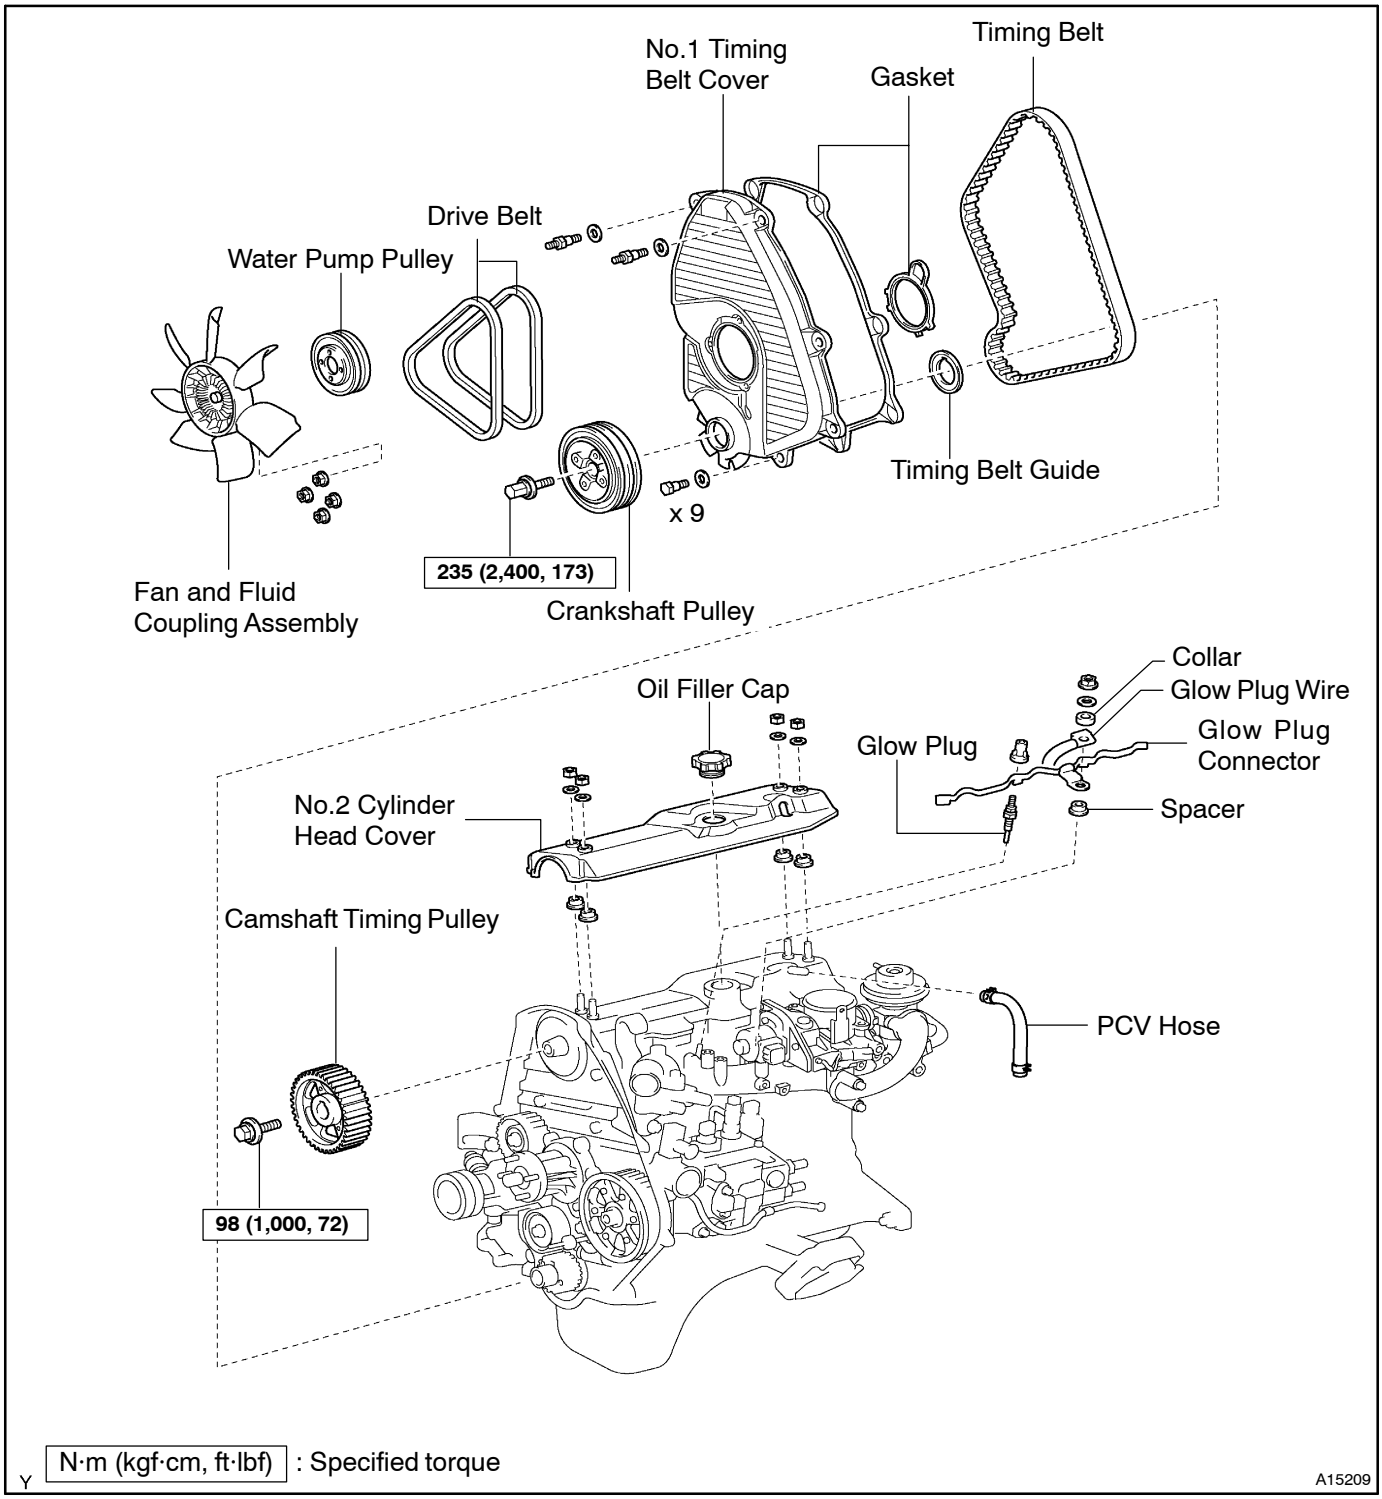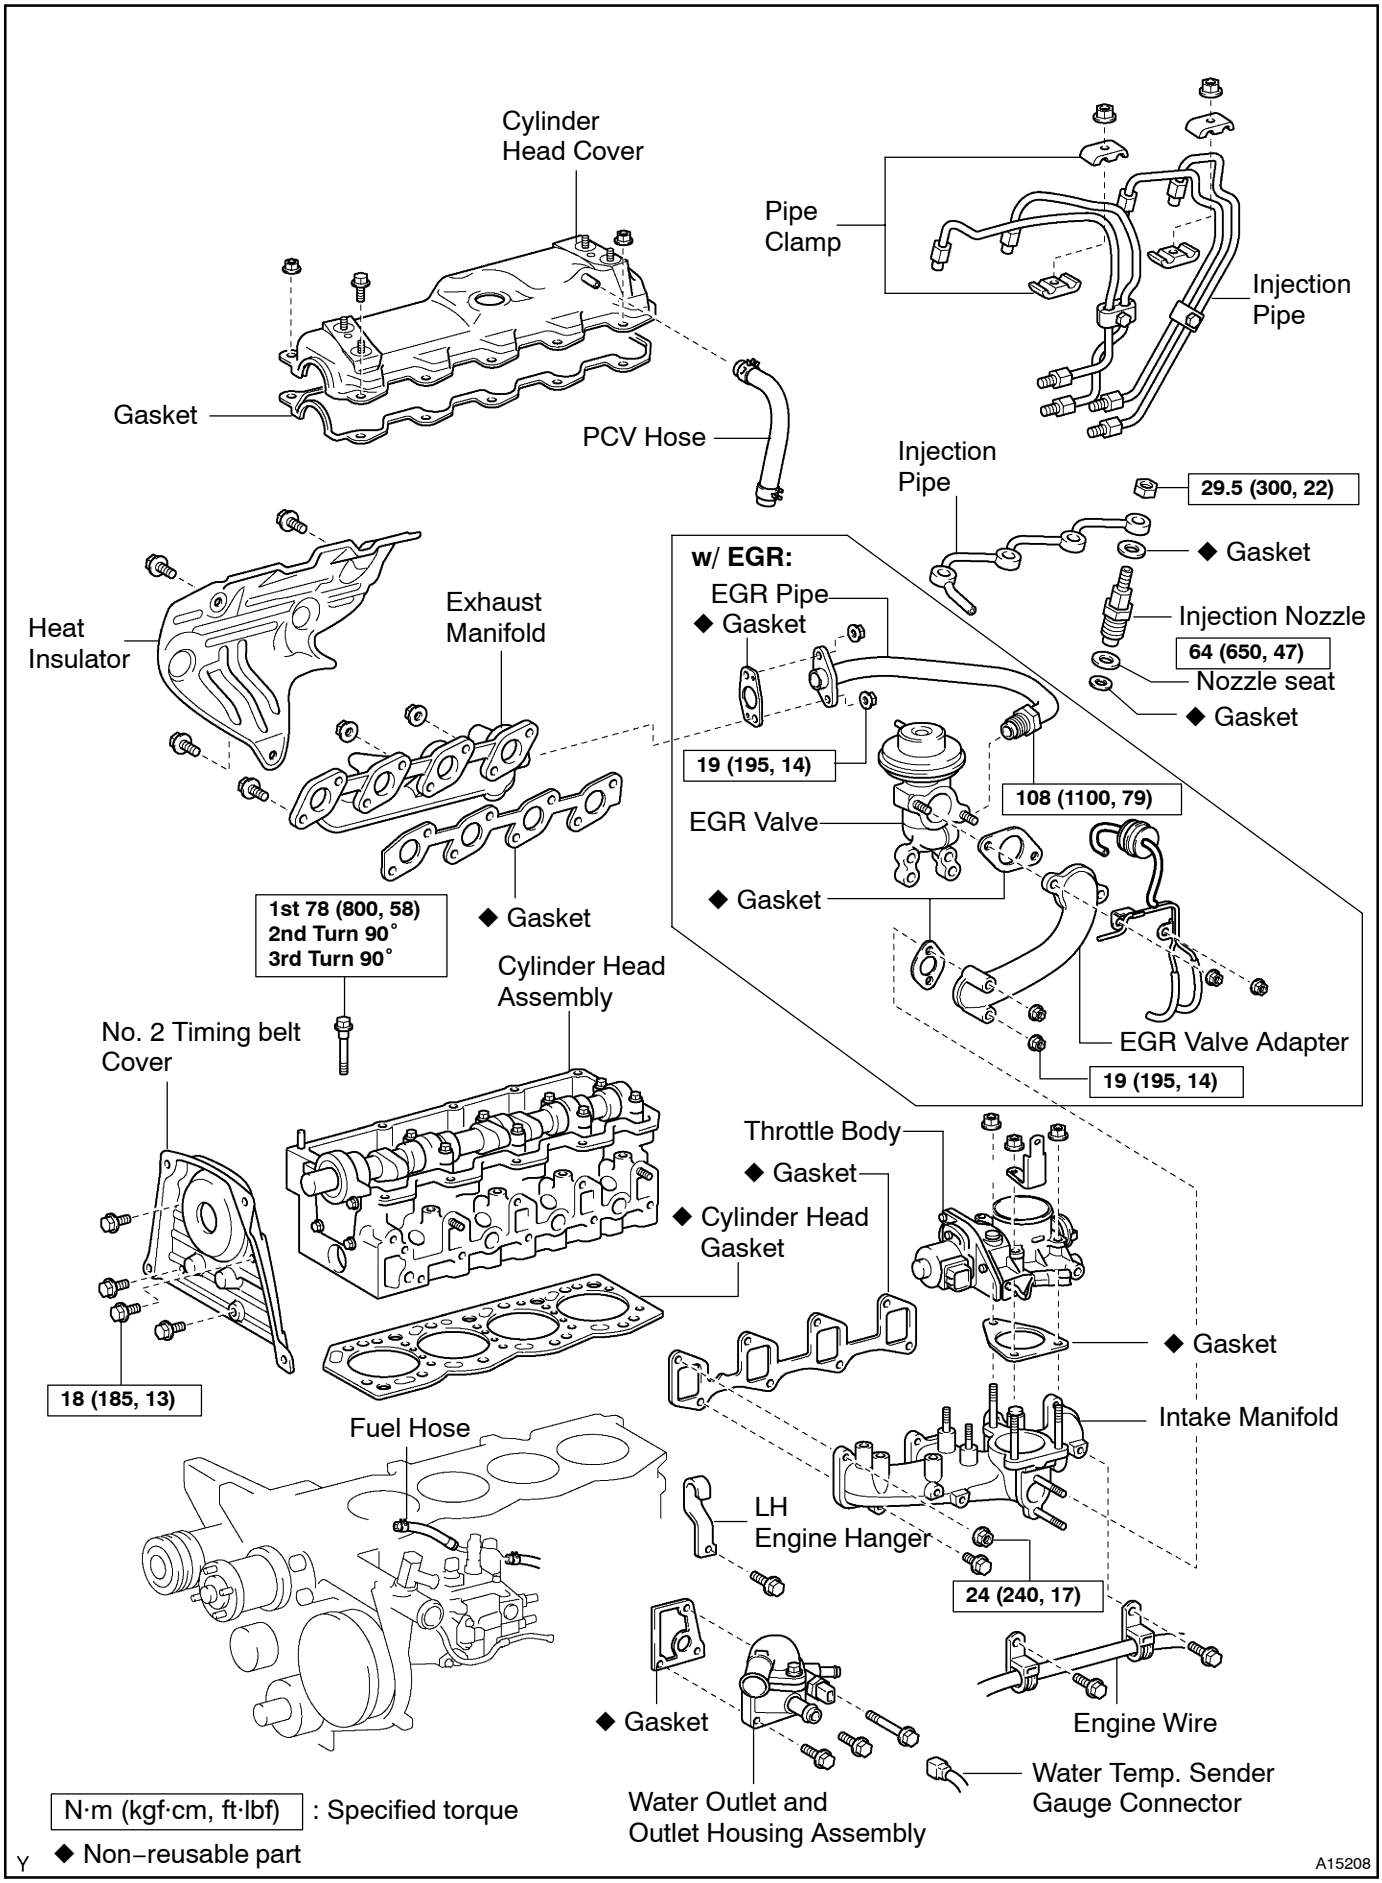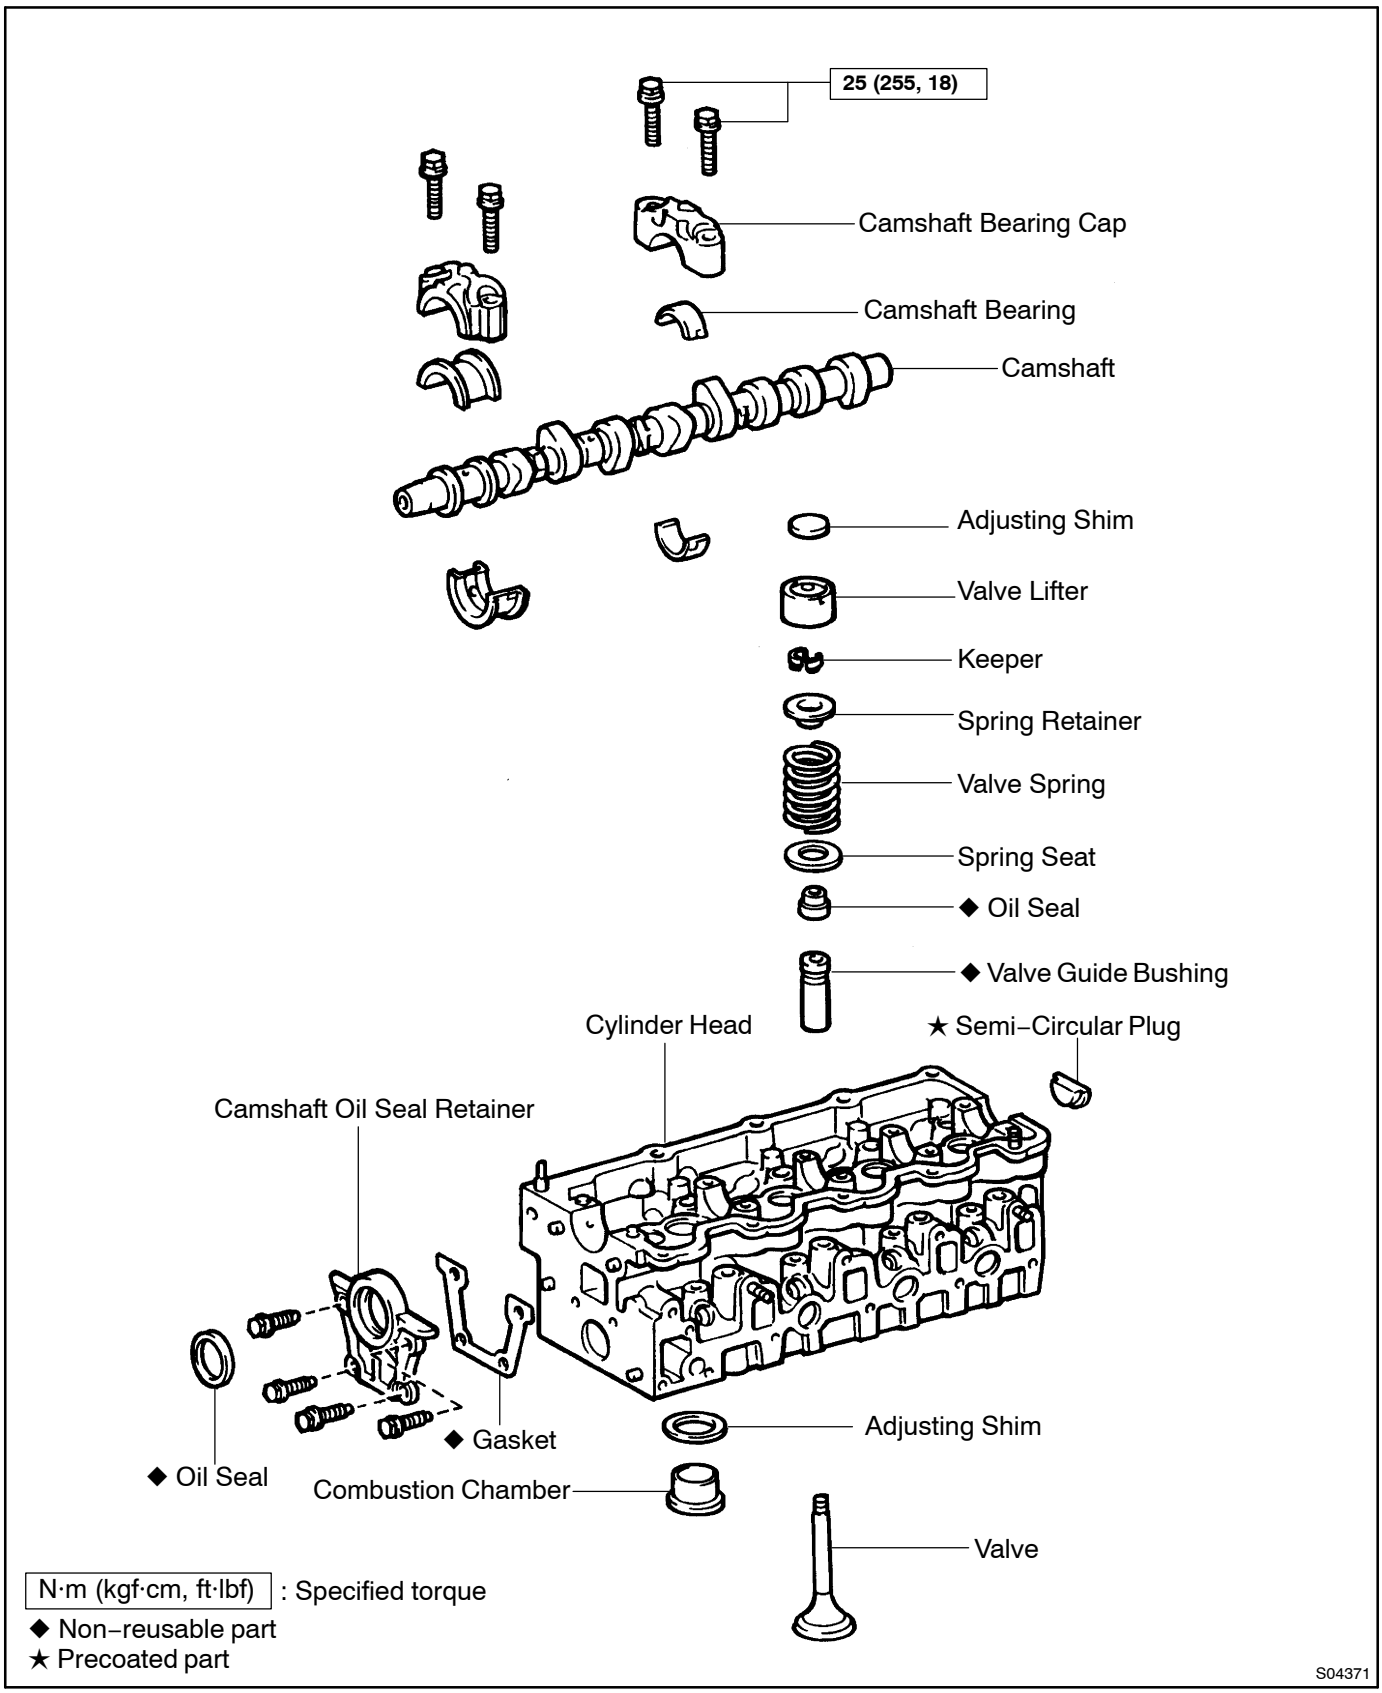


Cylinder Head Cover
Gasket
PCV Hose
Pipe Clamp
Injection Pipe
Injection Pipe
29.5 (300, 22)
◆ Gasket
Injection Nozzle
64 (650, 47)
Nozzle seat
◆ Gasket
w/ EGR:
EGR Pipe
◆ Gasket
19 (195, 14)
108 (1100, 79)
EGR Valve
◆ Gasket
EGR Valve Adapter
19 (195, 14)
Heat Insulator
Exhaust Manifold
1st 78 (800, 58)
2nd Turn 90°
3rd Turn 90°
◆ Gasket
Cylinder Head Assembly
No. 2 Timing belt Cover
18 (185, 13)
◆ Cylinder Head Gasket
Throttle Body
◆ Gasket
◆ Gasket
Intake Manifold
Fuel Hose
LH Engine Hanger
24 (240, 17)
◆ Gasket
Engine Wire
Water Temp. Sender Gauge Connector
Water Outlet and Outlet Housing Assembly
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Y
A15208


25 (255, 18)
Camshaft Bearing Cap
Camshaft Bearing
Camshaft
Adjusting Shim
Valve Lifter
Keeper
Spring Retainer
Valve Spring
Spring Seat
◆ Oil Seal
◆ Valve Guide Bushing
Cylinder Head
★ Semi–Circular Plug
Camshaft Oil Seal Retainer
◆ Gasket
◆ Oil Seal
Adjusting Shim
Combustion Chamber
Valve
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
S04371