
FU093–01


REMOVAL

1. w/ EGR:
   REMOVE EGR VALVE AND EGR ADAPTER
   (See page EM–6)
2. REMOVE THROTTLE BODY (See page ED–5)
3. REMOVE GLOW PLUG CONNECTOR
   (See Pub. No. RM520E on page EG–30)

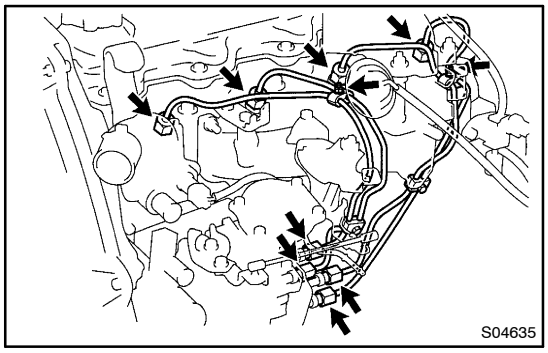


4. REMOVE INJECTION PIPES

(a) Loosen the 8 union nuts of the 4 injection pipes.
(b) Remove the 2 nuts, 2 upper pipe clamps, 4 injection pipes and lower pipe clamps.

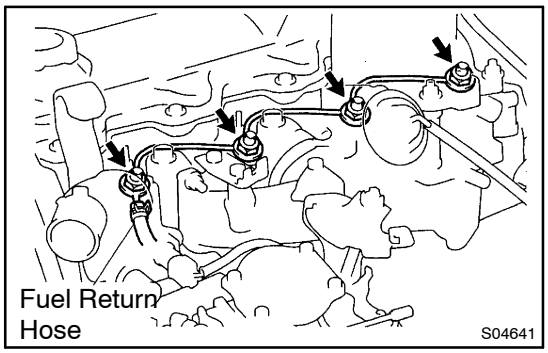

5. REMOVE NOZZLE LEAKAGE PIPE

(a) Disconnect the fuel return hose from the leakage pipe.
(b) Remove the 4 nuts, leakage pipe and 4 gaskets.

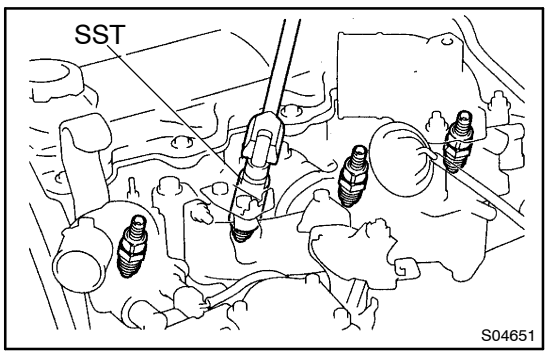

6. REMOVE INJECTION NOZZLE

Using SST, remove the 4 injection nozzles, 4 seats and 4 gaskets.

SST 09268–64010 (09268–64020)

HINT:
Arrange the injection nozzles in correct order.