
FU099–01

INSPECTION

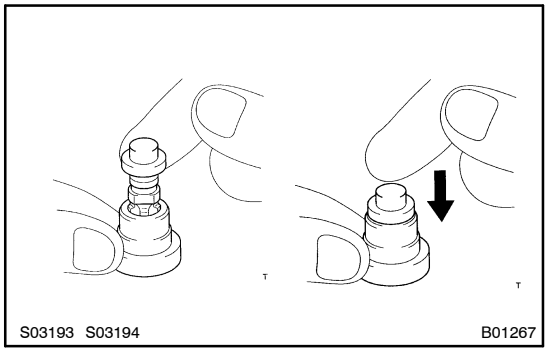

NOTICE:

Do not touch the sliding surfaces of the delivery valves.

INSPECT DELIVERY VALVES

(a) Pull up the valve, release it.

(b) Check that it sinks smoothly to the valve seat.

If operation is not as specified, replace the valve as a set.

HINT:

Before using a new valve set, wash off the rust prevention compound with diesel fuel. Then re–wash with diesel fuel and perform the above test.