
CH0KY–01

DISASSEMBLY

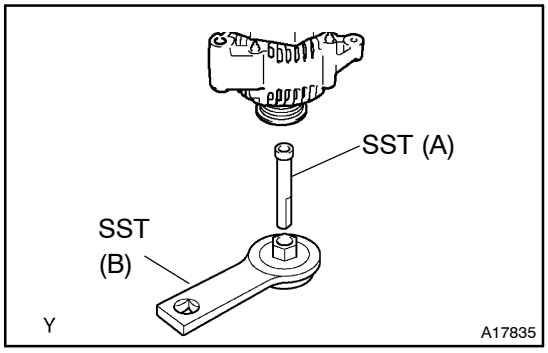


1. REMOVE GENERATOR W/CLUTCH PULLEY

(a) Remove the cover.


(b) Install SST to the pulley and vise as shown in the illustration.

(c) Mount SST (A) in a vise.
SST 09820–63020 (09821–63010, 09821–63020)

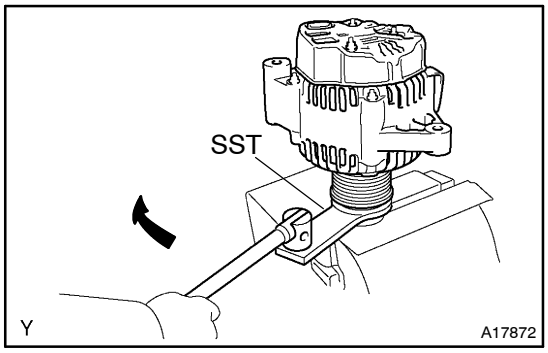

(d) Turn SST (B) clockwise, loosen the pulley.

(e) Remove the pulley.

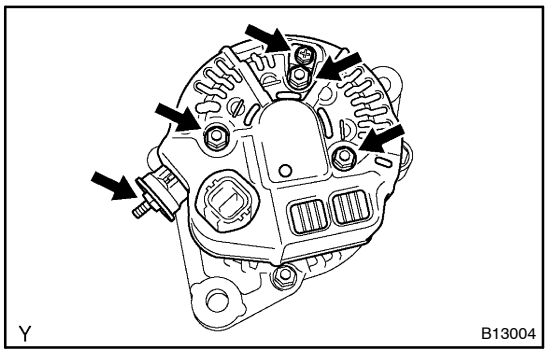


2. REMOVE REAR END COVER

(a) Remove the nut and terminal insulator.

(b) 70A
Remove the 3 nuts and bolt and end cover.

(c) 80A
Remove the 3 nuts, bolt and plate terminal and end cover.

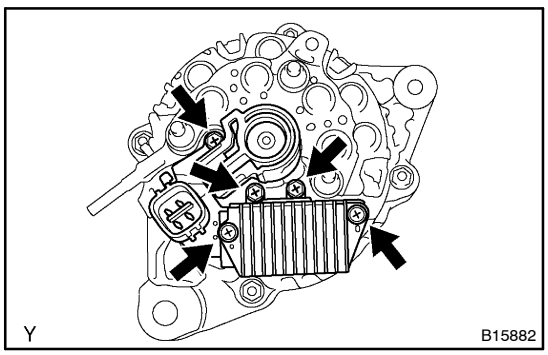


3. REMOVE BRUSH HOLDER

(a) Remove the 2 screws, brush holder and cover.

(b) Remove the brush holder cover from the brush holder.


4. REMOVE VOLTAGE REGULATOR

Remove the 3 screws and regulator.

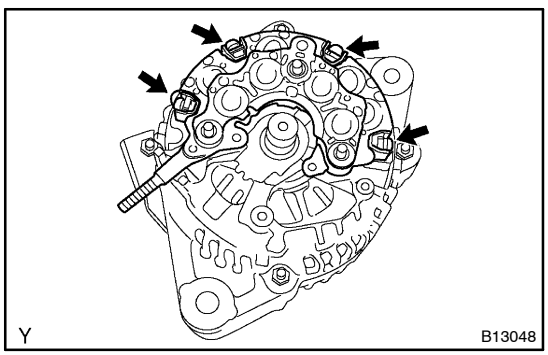


5. REMOVE RECTIFIER HOLDER

Remove the 4 screws and rectifier holder.

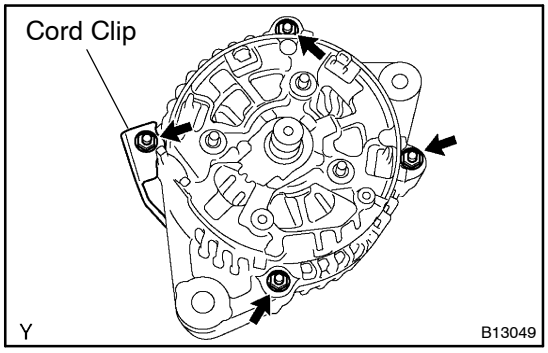

6. REMOVE RECTIFIER END FRAME

(a) Remove the 4 nuts and cord clip.

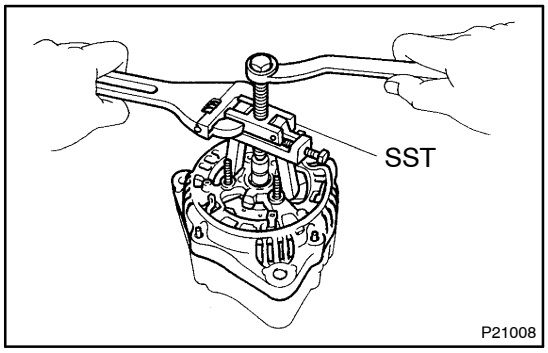

(b) Using SST, remove the rectifier end frame.
SST 09286–46011

(c) Remove the alternator washer from the rotor.