
CO1BO–01

INSTALLATION

1. INSTALL WATER PUMP ASSEMBLY


(a) Install a new gasket to the water pump cover.

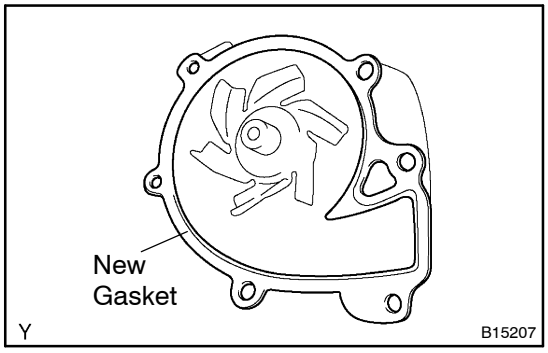

(b) Temporarily install the water pump with the 5 bolts and unt.

(c) Tighten the bolts and nuts.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

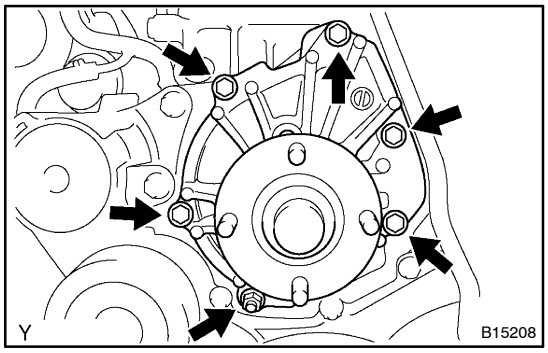

2. INSTALL DRIVE BELT, FAN AND WATER PUMP PULLEY

Stretch the belt tight and torque the 4 nuts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR COOLANT LEAKS

