CO0WP–03

REMOVAL


HINT:

Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

1. DRAIN ENGINE COOLANT

2. DISCONNECT RADIATOR LOWER HOSE

3. REMOVE ALTERNATOR

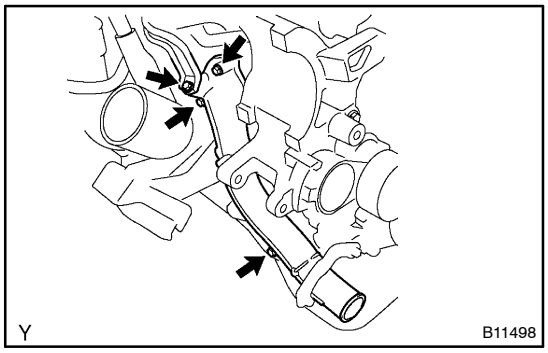

4. REMOVE WATER INLET AND THERMOSTAT

(a) Remove the bolt and oil dipstick guide.

(b) Remove the 3 bolts and water inlet from the cylinder block.

(c) Remove the thermostat.

(d) Remove the gasket from the thermostat.