
CO0NL–04

INSTALLATION

1. PLACE THERMOSTAT IN CYLINDER BLOCK


(a) Install a new gasket to the thermostat.

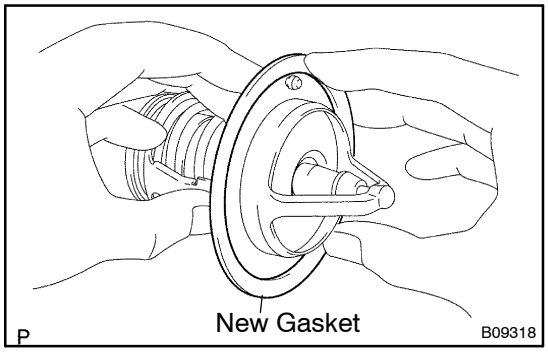

(b) Install the thermostat with the jiggle valve upward.

HINT:

The jiggle valve may be set within 30° of either side of the prescribed position.

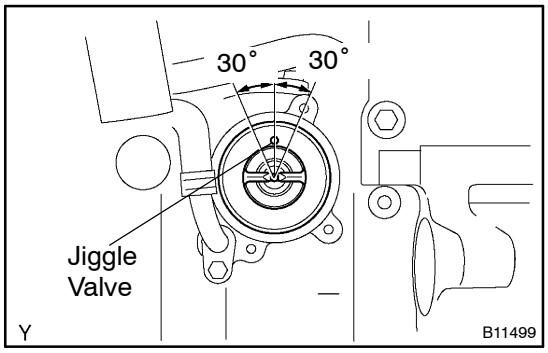

2. INSTALL WATER INLET TO CYLINDER BLOCK


(a) Install the water inlet with the 3 bolts.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

NOTICE:

Torque the 2 upper bolts first.

(b) Install the oil dipstick guide with the bolt.

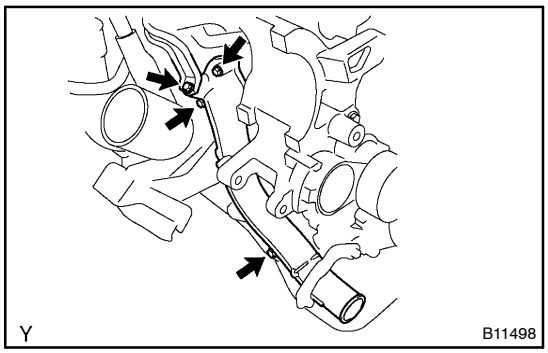

3. CONNECT RADIATOR LOWER HOSE

4. INSTALL ALTERNATOR (See page CO–6)

5. FILL WITH ENGINE COOLANT

6. START ENGINE AND CHECK FOR COOLANT LEAKS