CO0NN–04

# DISASSEMBLY

**1. REMOVE RADIATOR SUPPORTS**


Remove the 2 bolts, nuts, pipe, bushing and radiator support. Remove the LH and RH supports.

**2. REMOVE RADIATOR CAP**

**3. REMOVE DRAIN PLUG**

(a) Remove the drain plug.

(b) Remove the O–ring.

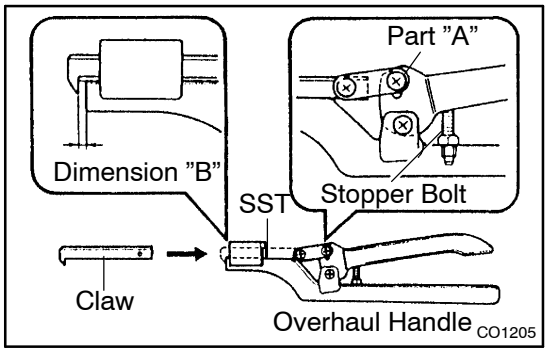


**4. ASSEMBLE SST**

SST 09230–01010


(a) Install the claw to the overhaul handle, inserting it in the hole in part ”A” as shown in the diagram.

(b) While gripping the handle, adjust the stopper bolt so that dimension ”B” is as shown in the illustration.

**Dimension B: 0.2 – 0.3 mm (0.008 – 0.012 in.)**

**NOTICE:**


**If this adjustment is not done the claw may be damaged.**

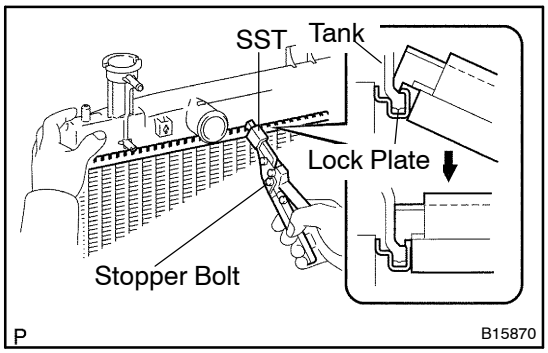


**5. UNCAULK LOCK PLATES**

Using SST to release the caulking, squeeze the handle until stopped by the stopper bolt.

SST 09230–01010

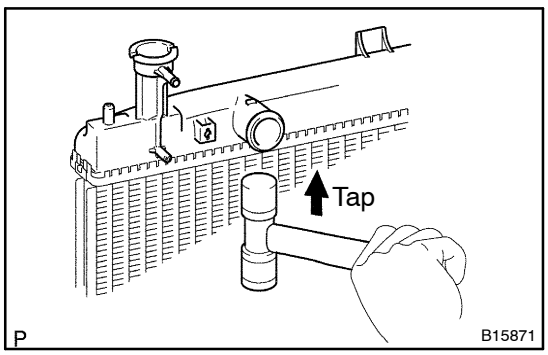


**6. REMOVE TANKS AND O–RINGS**

Lightly tap the radiator inlet or outlet (or bracket of the radiator) with a soft–faced hammer, and remove the tank and the O–ring.