

DI9RW–01

PARTS LOCATION

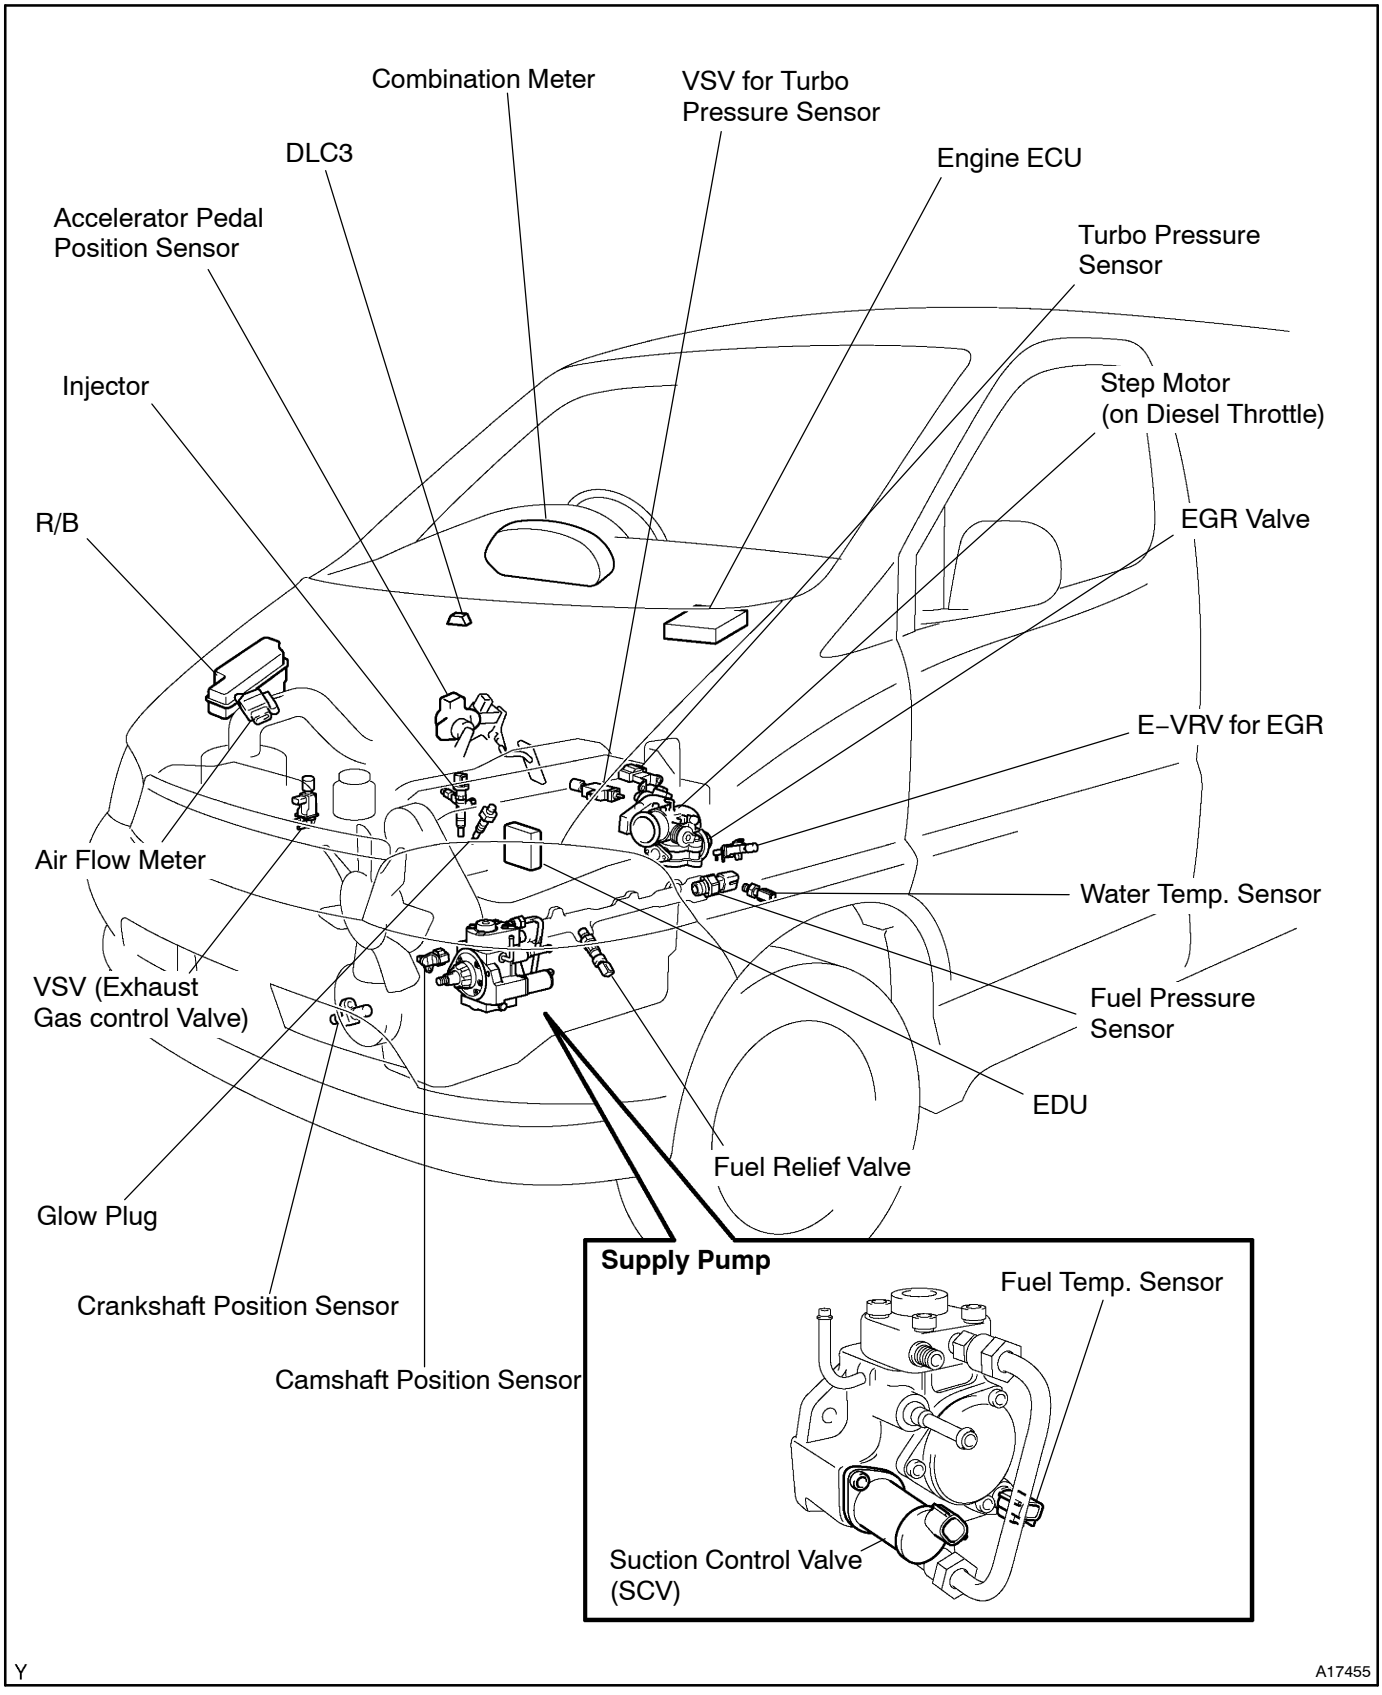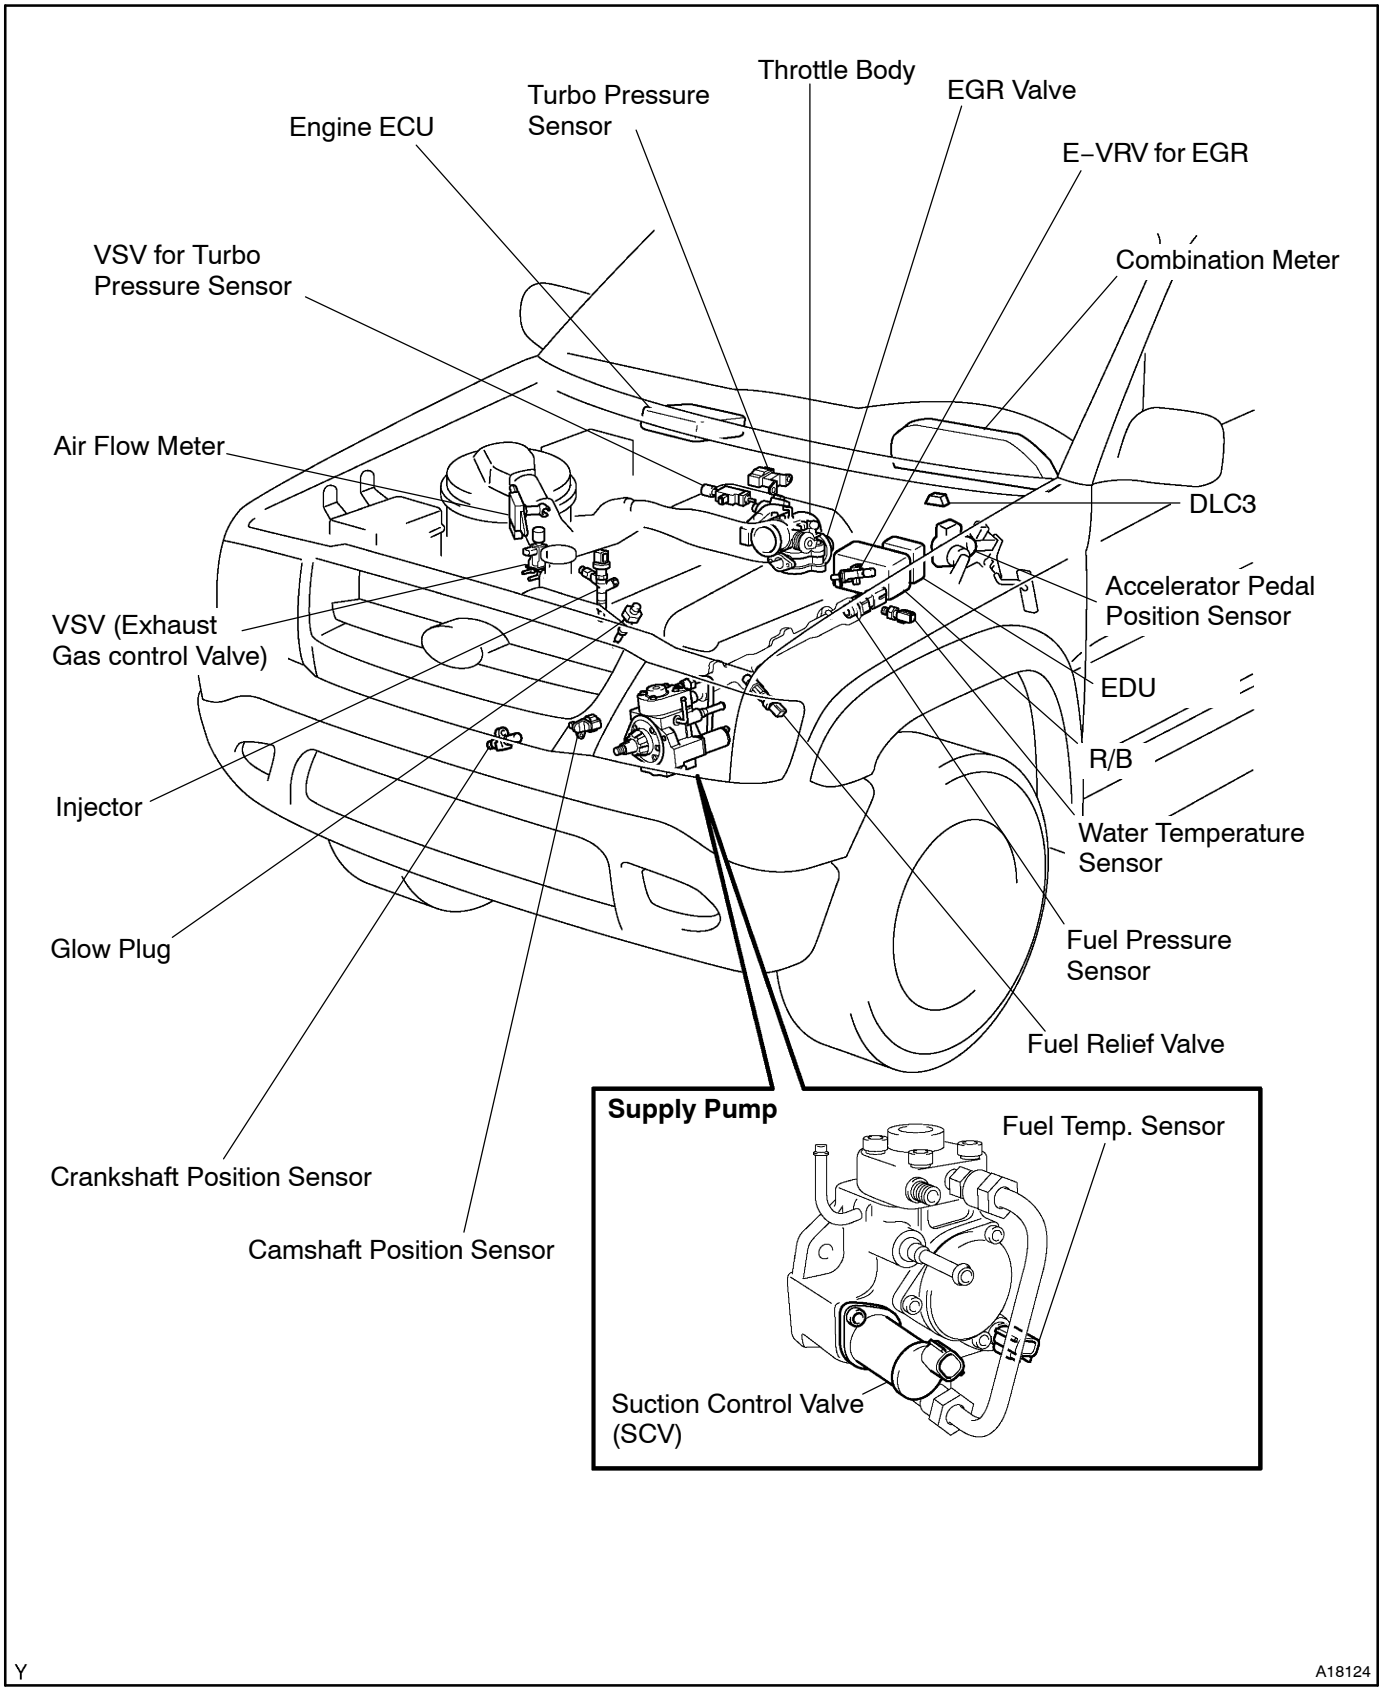


Throttle Body
Turbo Pressure Sensor
EGR Valve
Engine ECU
E–VRV for EGR
VSV for Turbo Pressure Sensor
Combination Meter
Air Flow Meter
DLC3
Accelerator Pedal Position Sensor
VSV (Exhaust Gas control Valve)
EDU
R/B
Injector
Water Temperature Sensor
Fuel Pressure Sensor
Glow Plug
Fuel Relief Valve
Supply Pump
Fuel Temp. Sensor
Crankshaft Position Sensor
Camshaft Position Sensor
Suction Control Valve (SCV)
Y
A18124