
ED047–02

REMOVAL

REMOVE DIESEL THROTTLE BODY

(a) Remove the 2 bolts and VSV for turbo charging pressure control assy.
(b) Disconnect the 2 connectors from the diesel throttle body.
(c) Disconnect the engine wire.

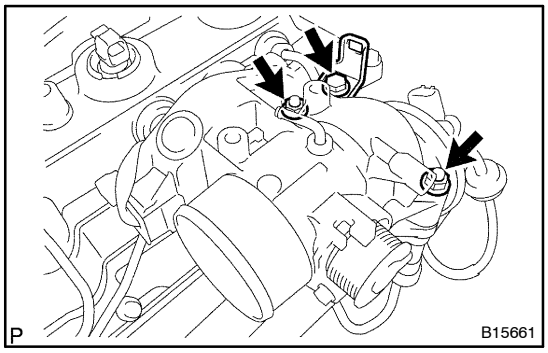

(d) Remove the 2 nuts, bolt, bracket, diesel throttle body and gasket.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

HINT:
At the time of installation, please refer to following item.
Place a new gasket.