
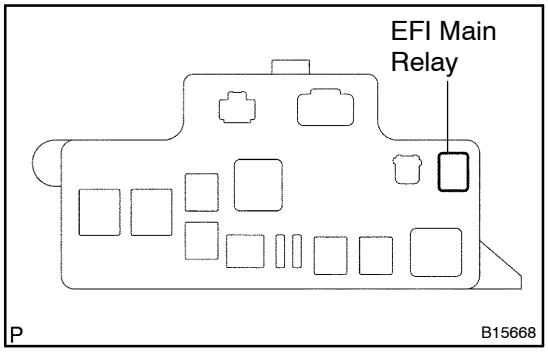


EFI MAIN RELAY

ED06C–01

INSPECTION

1. **REMOVE NO. 2 RELAY BOX COVER**
2. **REMOVE EFI MAIN RELAY (Marking: EFI)**

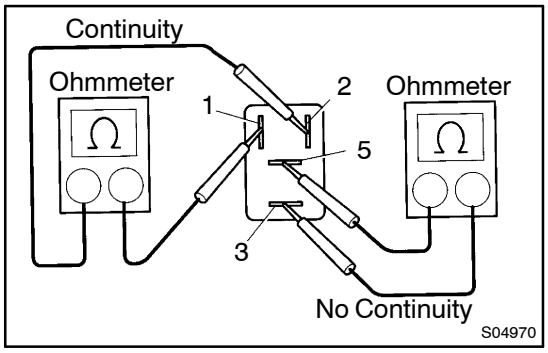

3. **INSPECT EFI MAIN RELAY**


(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

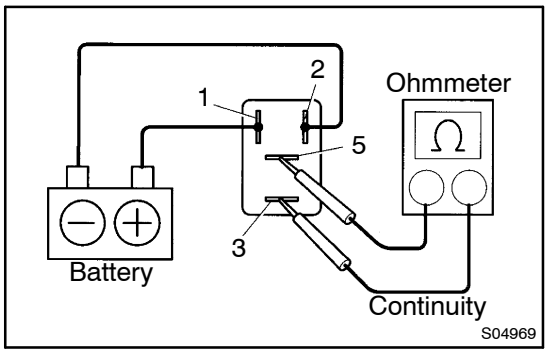

(b) Inspect the relay operation.

(1) Apply battery voltage across terminals 1 and 2.

(2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

4. **REINSTALL EFI MAIN RELAY**
5. **REINSTALL RELAY BOX COVER**