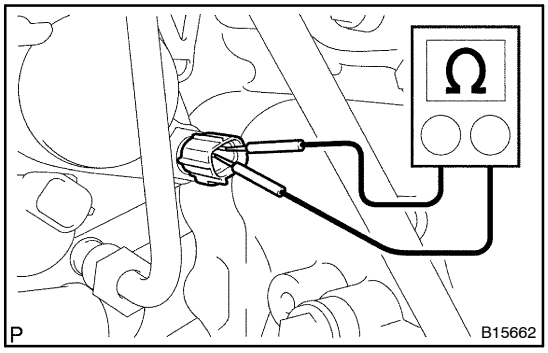


FUEL TEMPERATURE SENSOR

ED02F–03

INSPECTION

1. DISCONNECT FUEL TEMPERATURE SENSOR CONNECTOR

2. INSPECT FUEL TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between terminals.

Resistance:

2.21 – 2.79 kΩ at 20°C (68°F)

0.287 – 0.349 kΩ at 80°C (176°F)

If the resistance is not specified, replace the supply pump (See page FU–15).

3. RECONNECT FUEL TEMPERATURE SENSOR CONNECTOR