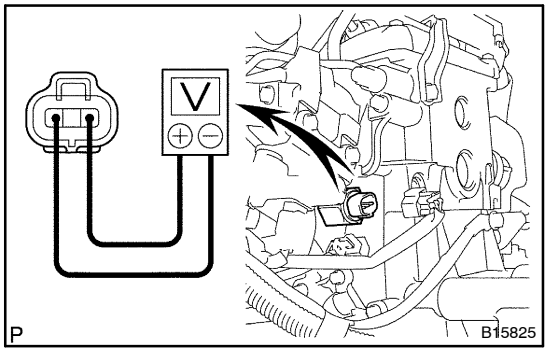



# FUEL PRESSURE SENSOR

ED02G–03

## INSPECTION

**1. INSPECT POWER SOURCE VOLTAGE OF FUEL PRESSURE SENSOR**

(a) Disconnect the sensor connector.

(b) Turn the ignition switch ON.

(c) Using a voltmeter, measure the voltage between connector terminals VCC and GND of the wiring harness side.

**Voltage: 4.75 – 5.25 V**

(d) Turn the ignition switch OFF.

(e) Reconnect the sensor connector.

**2. INSPECT VOLTAGE BETWEEN TERMINALS PCR AND E2 (See page DI–95)**