AIR FILTER (Paper Filter Type)


EM1TG–01

INSPECTION

1. REMOVE AIR FILTER

2. INSPECT AIR FILTER

Visually check that the filter element is not excessively dirty, damaged or oily.

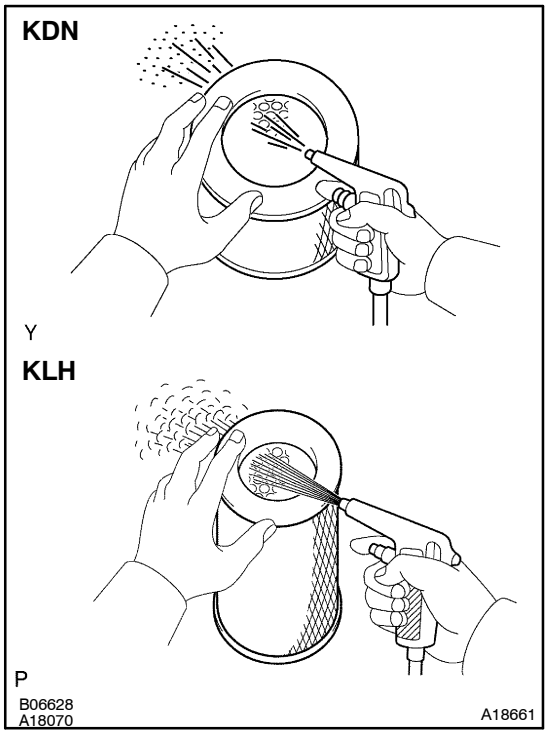

3. CLEAN AIR FILTER

Clean the filter element with compressed air.

First blow from the inside thoroughly. Then blow the outside of the filter element.

4. REINSTALL AIR FILTER