


CYLINDER HEAD


COMPONENTS

EM1TQ–01

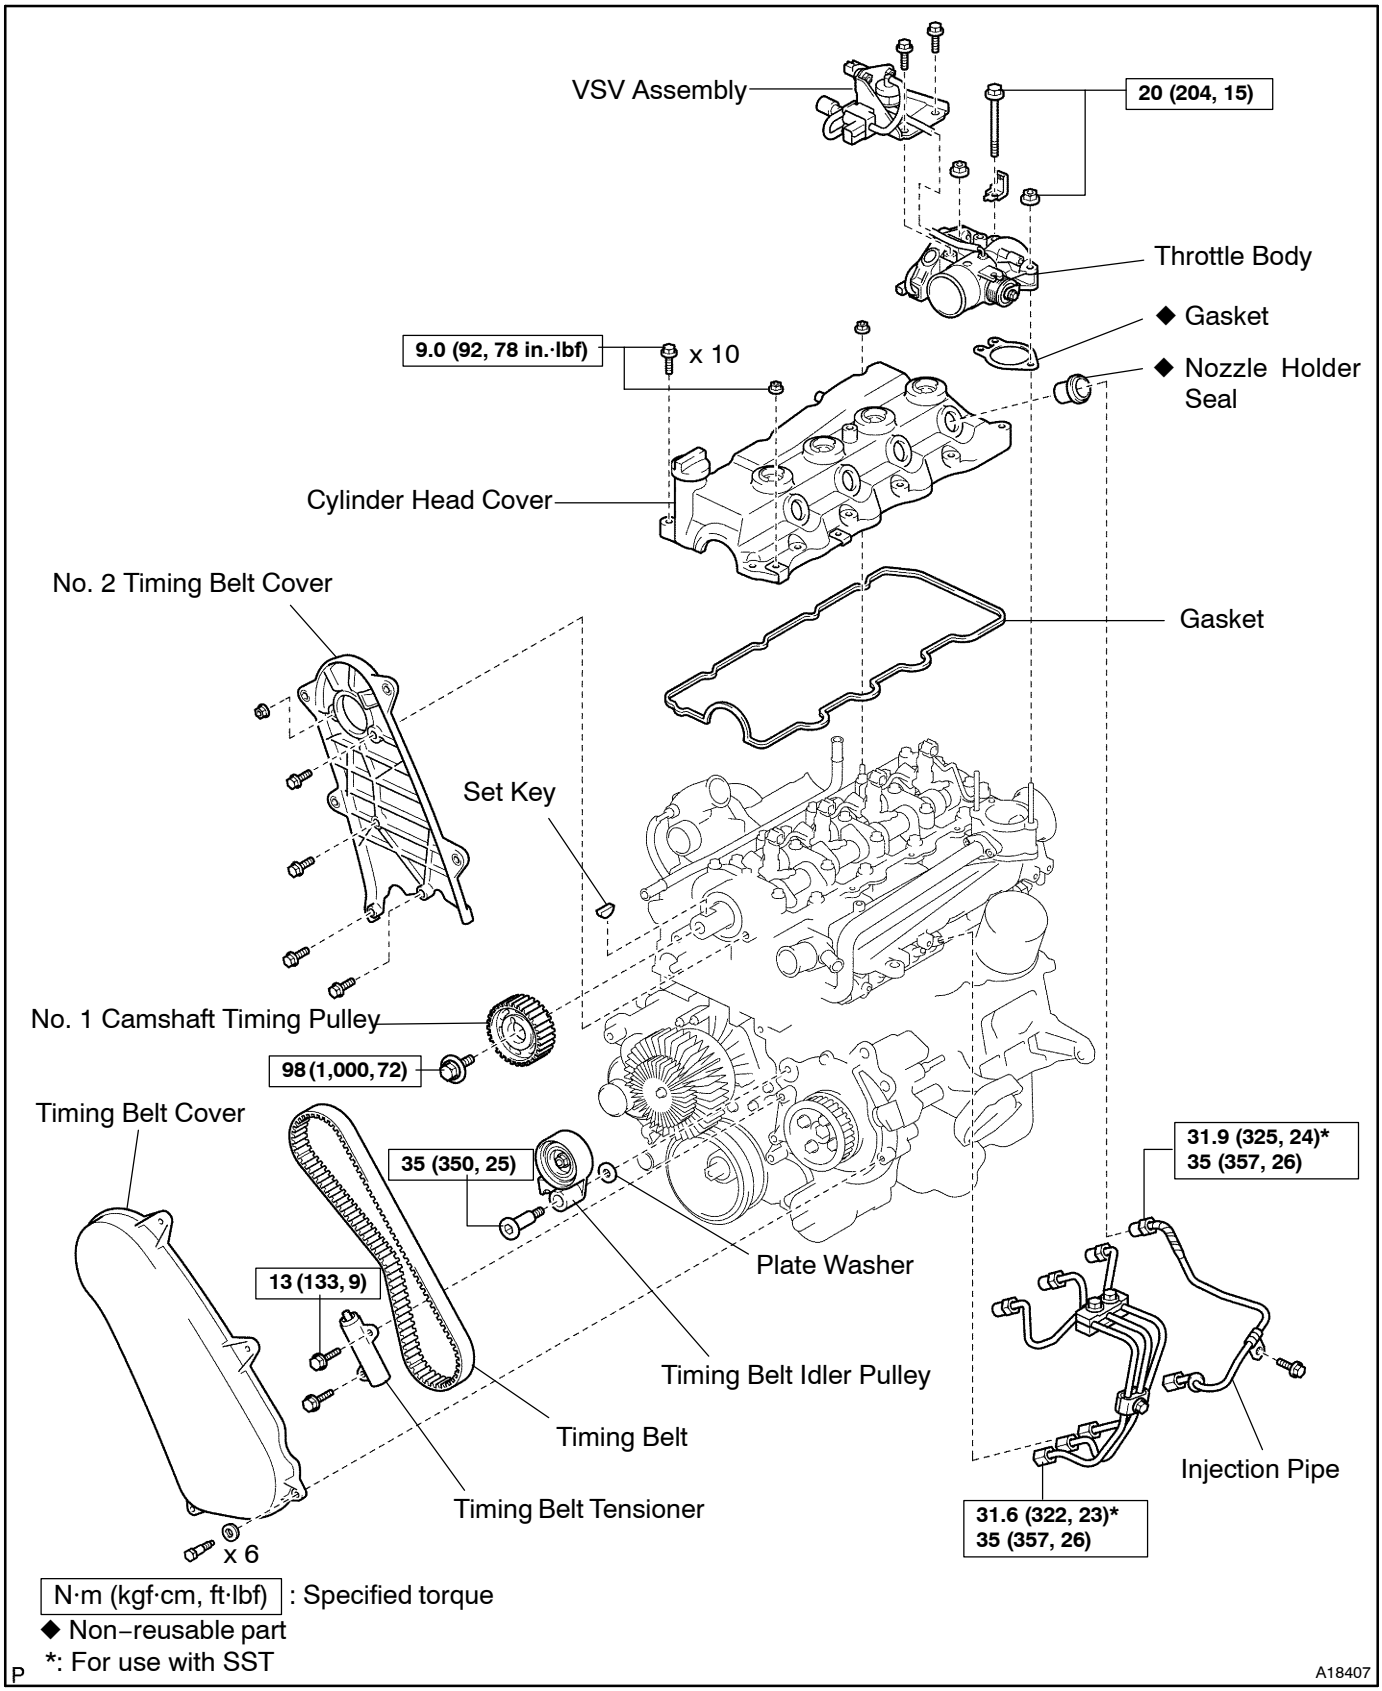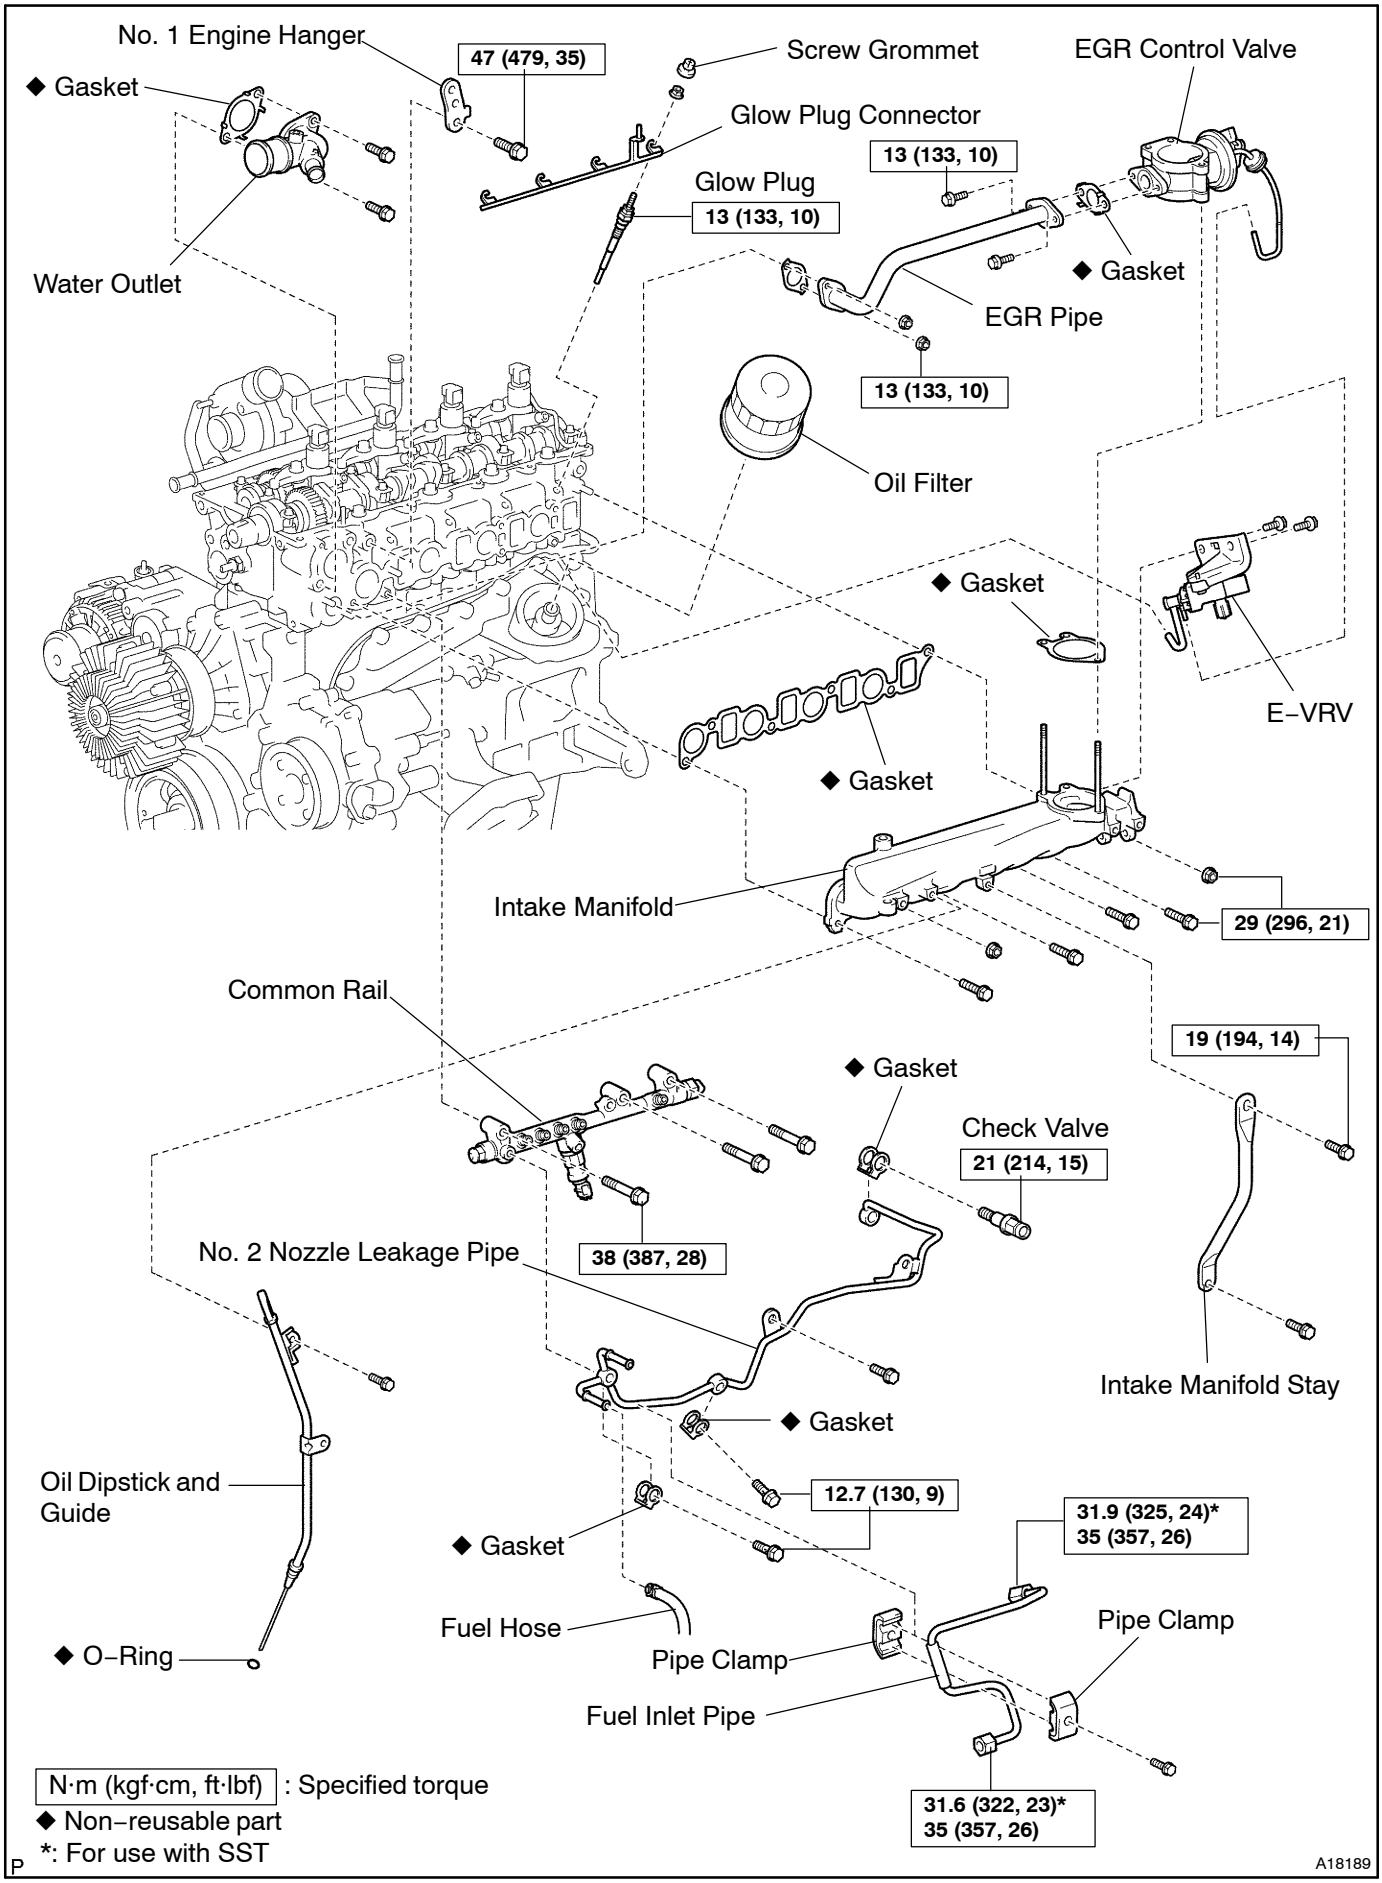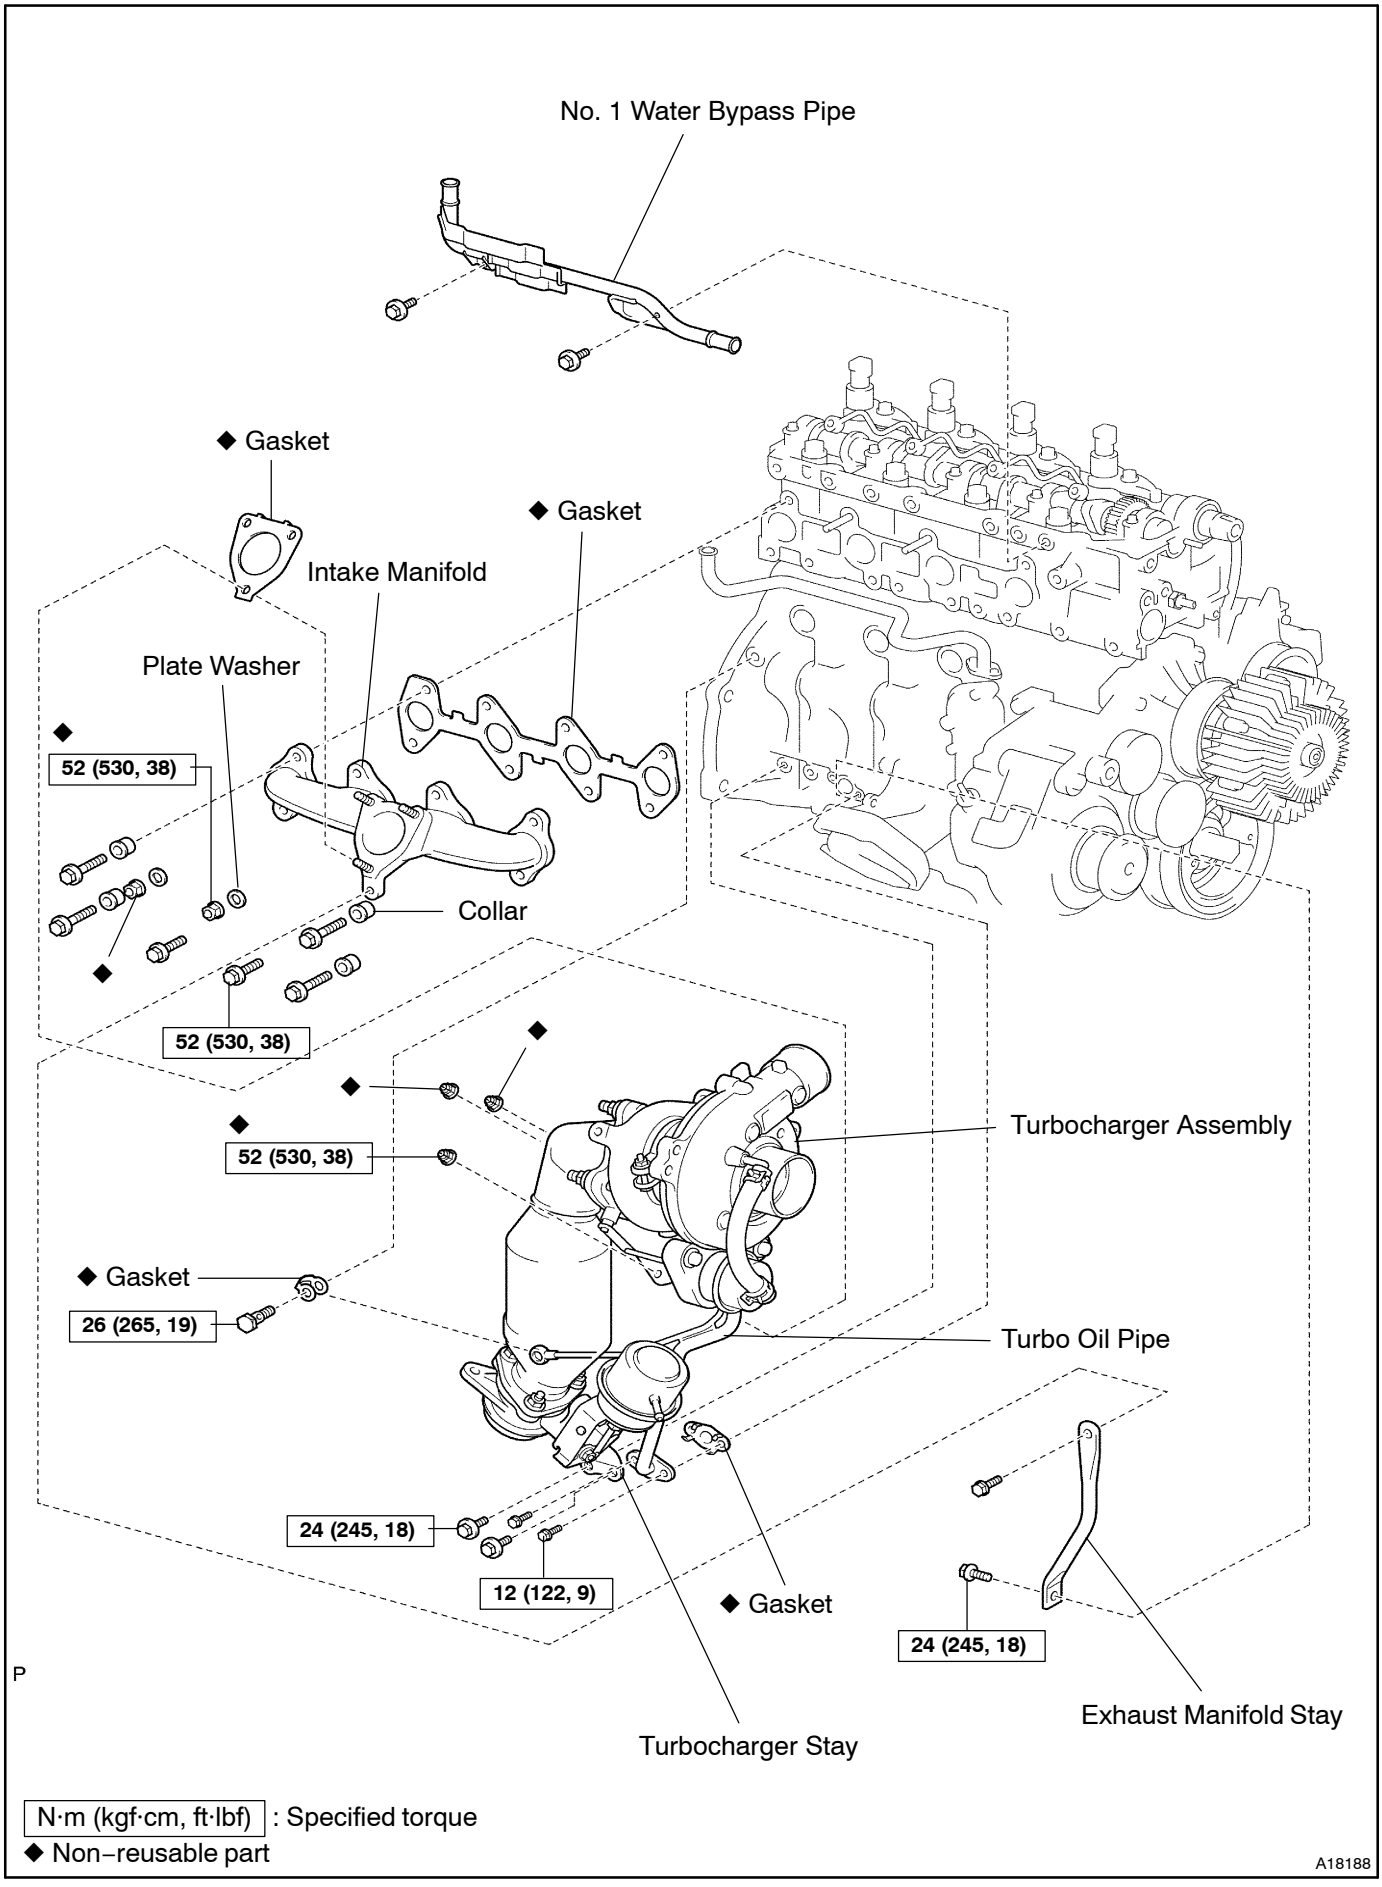


No. 1 Engine Hanger
47 (479, 35)
Screw Grommet
EGR Control Valve
◆ Gasket
Glow Plug Connector
13 (133, 10)
Glow Plug
13 (133, 10)
◆ Gasket
Water Outlet
EGR Pipe
13 (133, 10)
Oil Filter
◆ Gasket
E–VRV
◆ Gasket
Intake Manifold
29 (296, 21)
Common Rail
19 (194, 14)
◆ Gasket
Check Valve
21 (214, 15)
38 (387, 28)
No. 2 Nozzle Leakage Pipe
Intake Manifold Stay
◆ Gasket
Oil Dipstick and Guide
12.7 (130, 9)
31.9 (325, 24)*
35 (357, 26)
◆ Gasket
Fuel Hose
Pipe Clamp
Pipe Clamp
◆ O–Ring
Fuel Inlet Pipe
31.6 (322, 23)*
35 (357, 26)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
*: For use with SST
P
A18189



No. 1 Water Bypass Pipe
◆ Gasket
Intake Manifold
◆ Gasket
Plate Washer
◆
52 (530, 38)
Collar
◆
52 (530, 38)
◆
◆
52 (530, 38)
Turbocharger Assembly
◆ Gasket
26 (265, 19)
Turbo Oil Pipe
24 (245, 18)
12 (122, 9)
◆ Gasket
24 (245, 18)
Exhaust Manifold Stay
Turbocharger Stay
P
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A18188

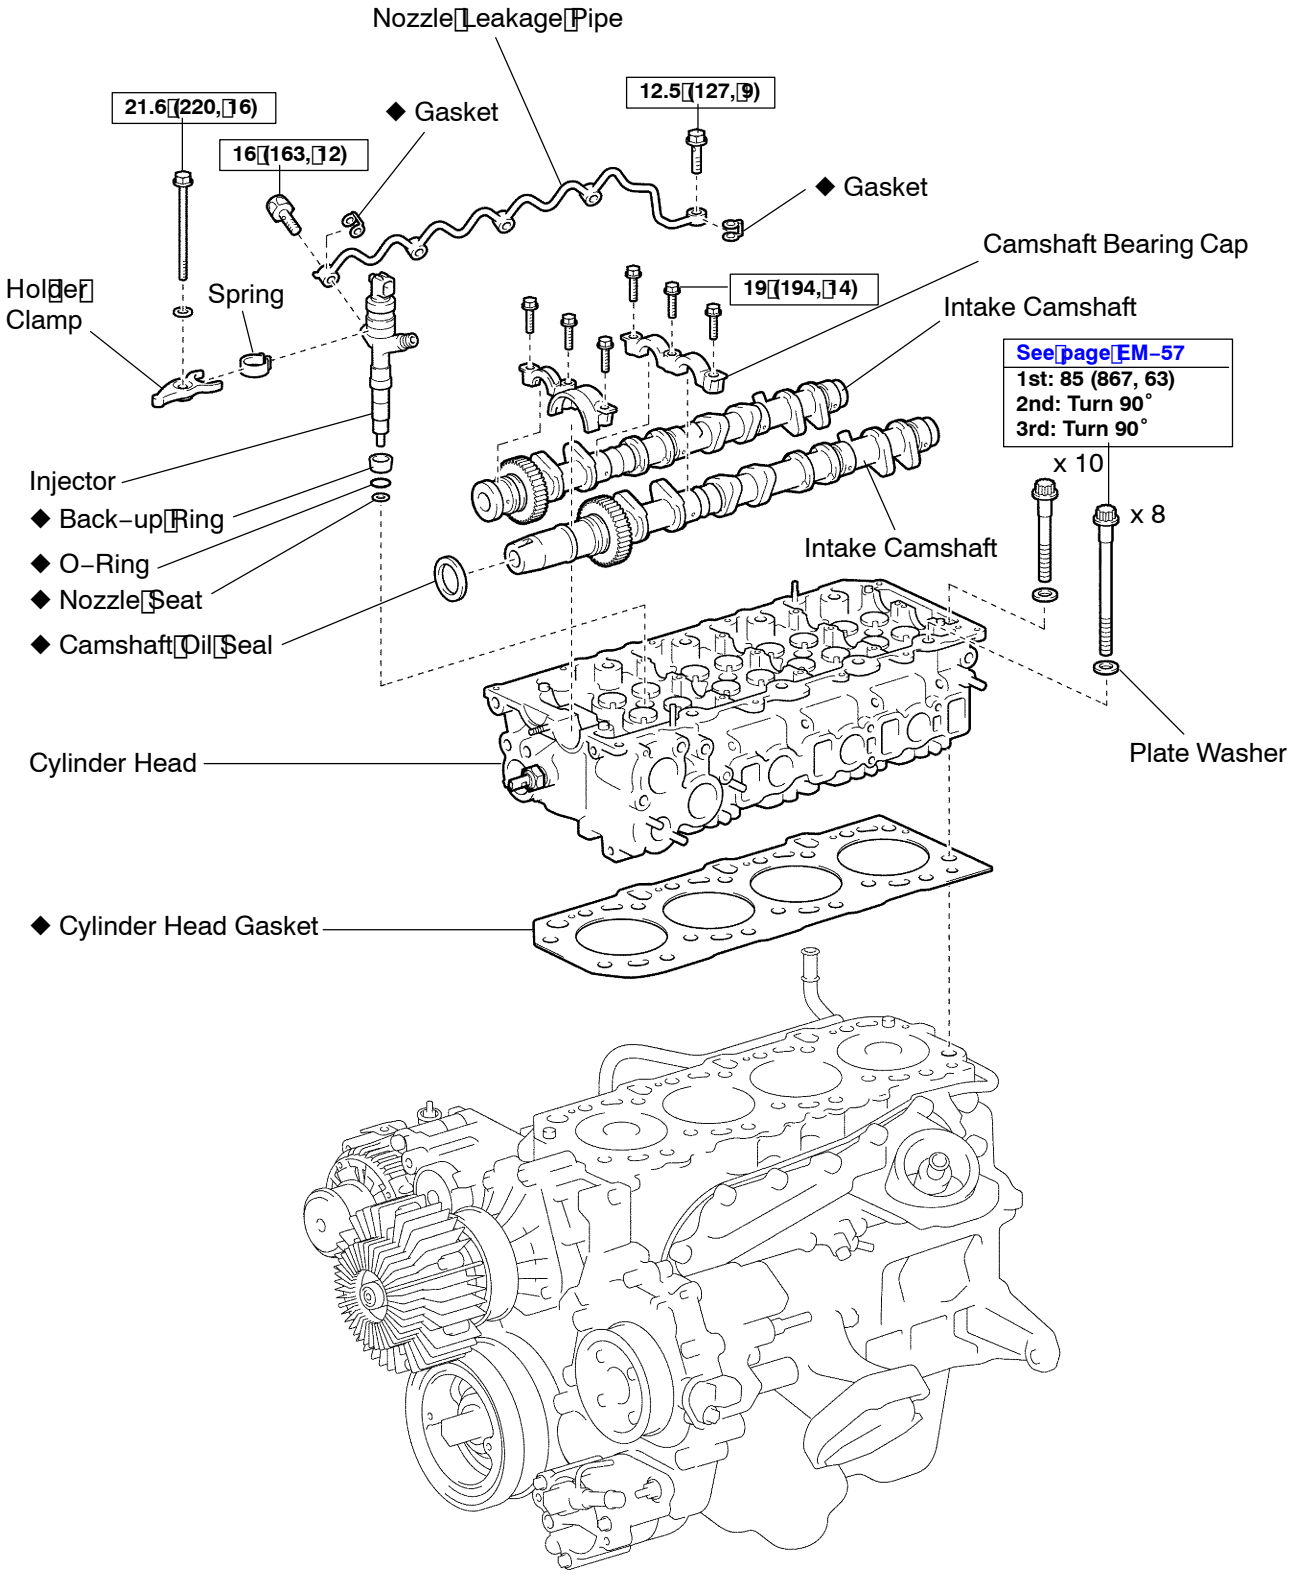

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part

P

A18185

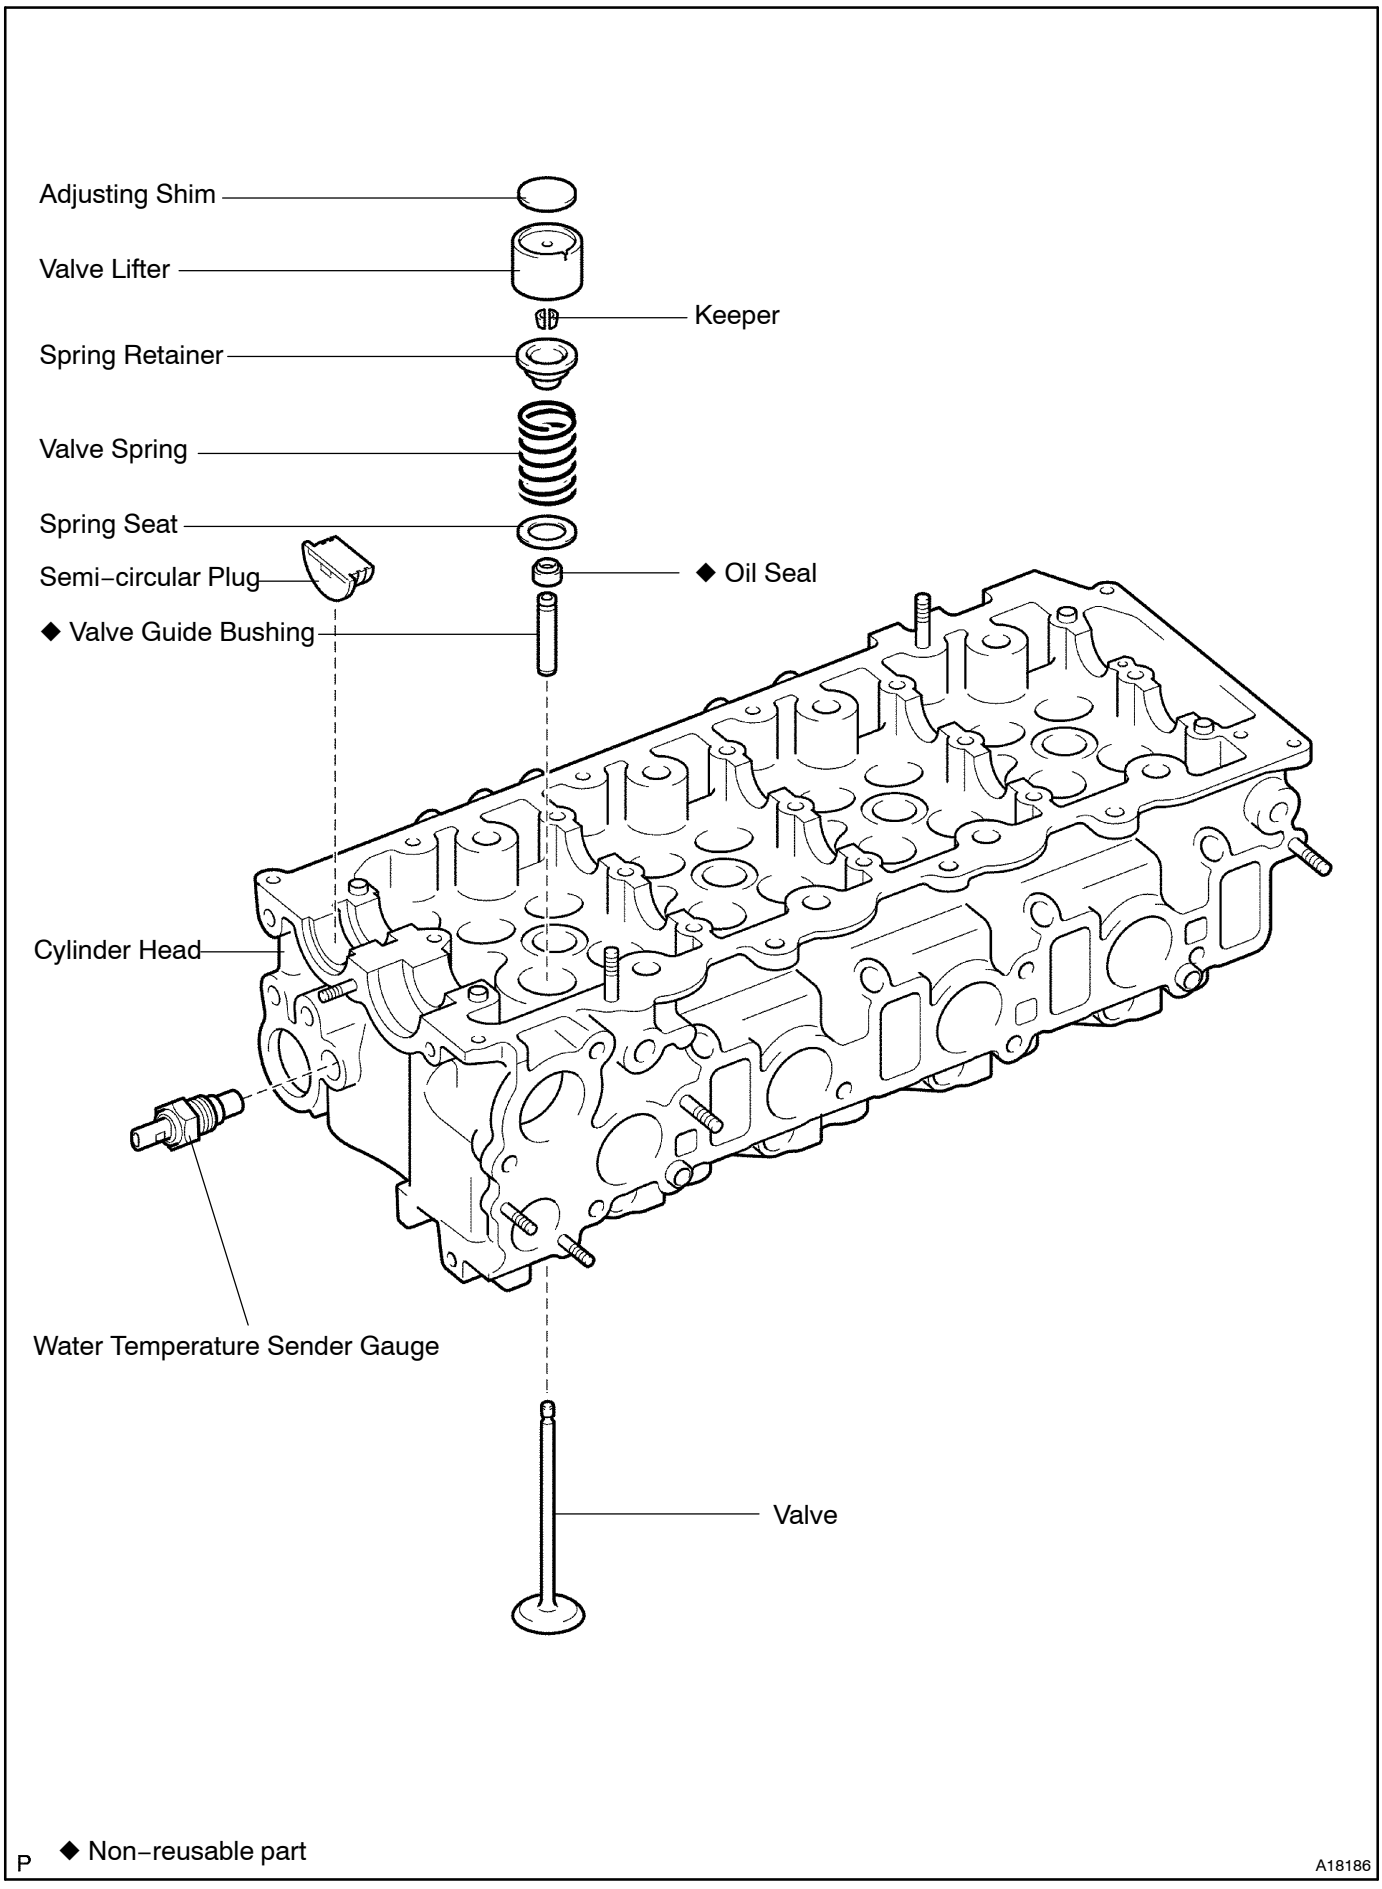
Adjusting Shim
Valve Lifter
Keeper
Spring Retainer
Valve Spring
Spring Seat
Semi–circular Plug
◆ Oil Seal
◆ Valve Guide Bushing
Cylinder Head
Water Temperature Sender Gauge
Valve
P
◆ Non–reusable part
A18186