EM1TS–01

DISASSEMBLY

1. REMOVE WATER TEMPERATURE SENDER GAUGE


2. REMOVE SEMI–CIRCULAR PLUG

3. REMOVE VALVE LIFTERS

Remove the valve lifter and adjusting shim.

HINT:

Arrange the valve lifters and shims in correct order.

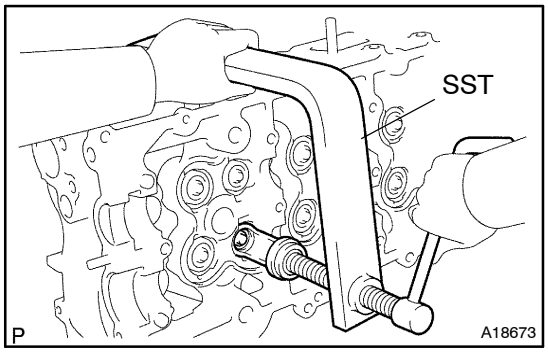

4. REMOVE VALVES


(a) Using SST, compress the compression spring and remove the 2 keepers.

SST 09202–70020 (09202–00020)

(b) Remove the spring retainer, compression spring, valve and spring seat.

HINT:

Arrange the valves, compression springs, spring seats and spring retainers incorrect order.

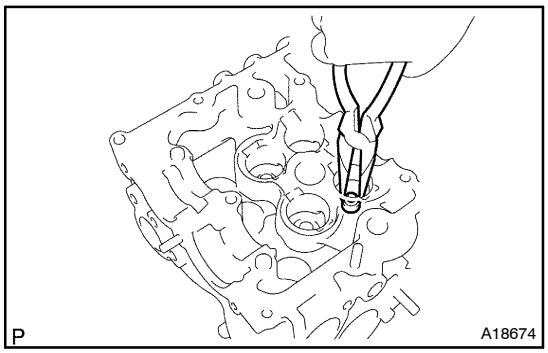

(c) Using needle–nose pliers, remove the oil seal.