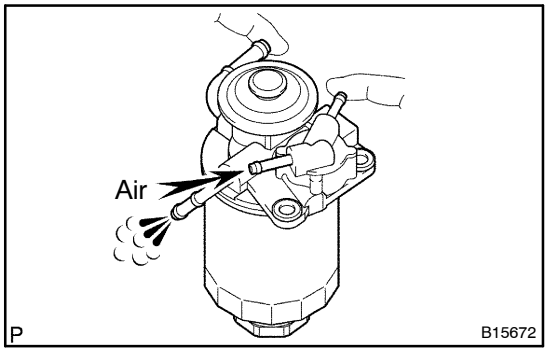



FUEL HEATER

FU0AV–01

INSPECTION

INSPECT THE RETURN CIRCULATION HEATER

(a) When the temperature of the bimetal is 20˚C or less:
With the pipes closed, as shown in the illustration, check that air flows.

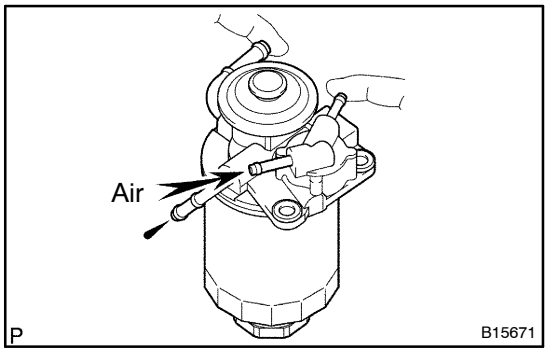

(b) When the temperature of the bimetal is 34˚C or more:
With the pipes closed, as shown in the illustration, check that air does not flow.
In case that the bimetal does not operate normally, exchange the fuel filter assembly.