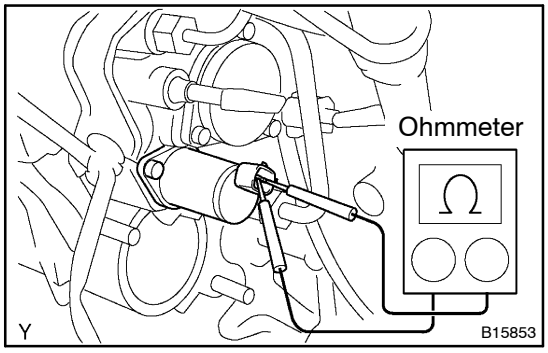


SUPPLY PUMP

FU08U–03


ON–VEHICLE INSPECTION

INSPECT SCV

(a) Disconnect the SCV connector.

(b) Using an ohmmeter, measure the resistance between terminals as shown.

Resistance: 1.95 – 2.25 Ω at 20˚C (68˚F)

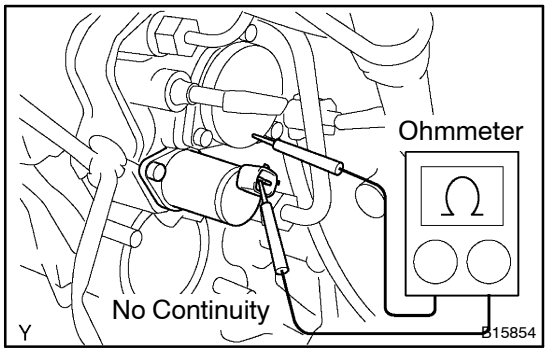

(c) Using an ohmmeter, check that there is no continuity between the terminal and ground as shown.