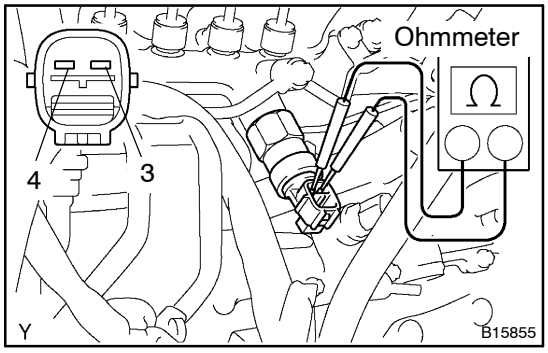


COMMON RAIL

FU0B0–01


ON–VEHICLE INSPECTION

INSPECT FUEL RELIEF VALVE

(a) Disconnect the fuel relief valve connector.

(b) Using an ohmmeter, measure the resistance between terminals as shown.

Resistance: 2.6 – 2.8 Ω at 20°C (68°F)

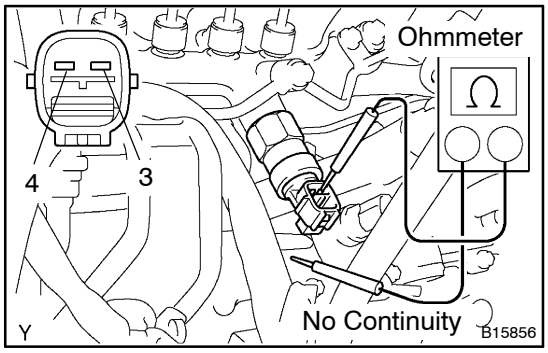

(c) Using an ohmmeter, check that there is no continuity between the terminal and ground as shown.