
FU090–02

# INSTALLATION

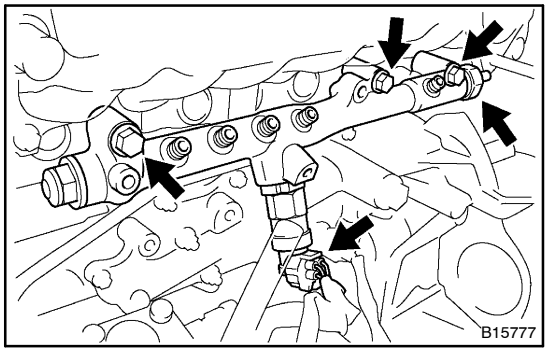


**NOTICE:**


**In case of having the common rail, must replace injection pipes and fuel inlet pipe, too.**

**1. INSTALL COMMON RAIL**

(a) Install the common rail with the 3 bolts.

**Torque: 38 N·m (387 kgf·cm, 28 ft·lbf)**

(b) Connect the sensor connectors.

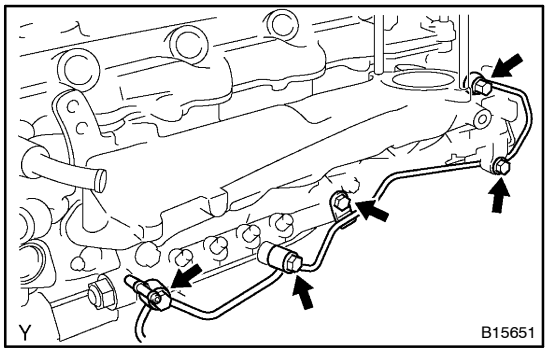


**2. INSTALL NO. 2 NOZZLE LEAKAGE PIPE**

**Torque:**

**Bolt: 12.7 N·m (130 kgf·cm, 9 ft·lbf)**

**Union bolt: 12.7 N·m (130 kgf·cm, 9 ft·lbf)**

**Check valve: 21 N·m (214 kgf·cm, 15 ft·lbf)**

**3. INSTALL STAY**

**4. INSTALL OIL FILTER (See page LU–2)**

**5. INSTALL FUEL INLET PIPE (See page FU–17)**

**6. INSTALL INJECTION PIPE (See page FU–8)**

**7. CHECK FUEL LEAK (See page FU–8)**