LU0PC–01

REASSEMBLY

1. INSTALL RELIEF VALVE

(a) Insert the relief valve and spring into the installation hole of the timing gear case.


(b) Install a new gasket and the plug.

Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

2. INSTALL NO. 1 STRAIGHT SCREW PLUG

Install a new gasket and the plug.

Torque: 41.5 N·m (423 kgf·cm, 31 ft·lbf)

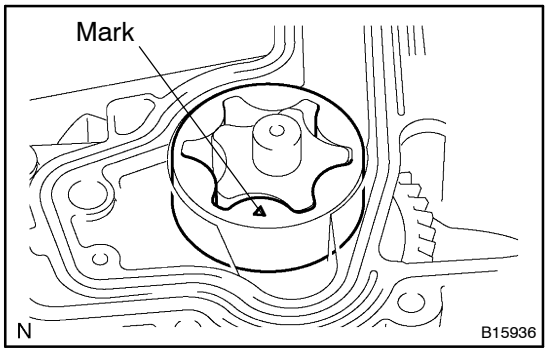

3. INSTALL DRIVEN ROTORS

Insert the driven rotor into timing gear case with the mark facing the cylinder block side.