

LU0PF–01

INSPECTION

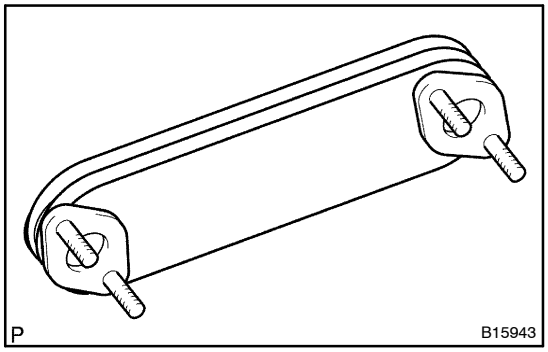

1. INSPECT OIL COOLER

Check the oil cooler for damage or clogging.
If necessary, replace the oil cooler.

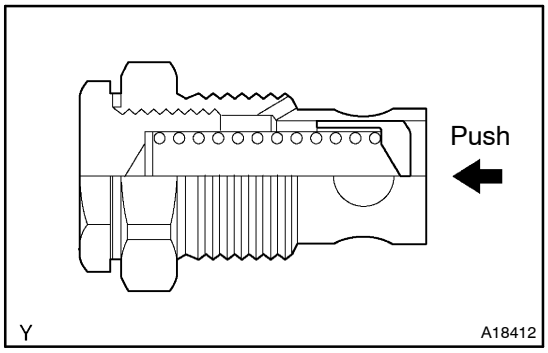

2. INSPECT RELIEF VALVE

(a) Remove the relief valve.
(b) Push the valve with a wooden stick to check if it is stuck.

If stuck, replace the relief valve.

(c) Reinstall the relief valve.

Torque: 39.2 N·m (400 kgf·cm, 29 ft·lbf)