
LU0PG–01

INSTALLATION

1. ASSEMBLY OIL COOLER AND OIL COOLER COVER

Install 2 new gaskets and the oil cooler to the oil cooler cover with the 4 nuts.

Torque: 16 N·m (163 kgf·cm, 12 ft·lbf)

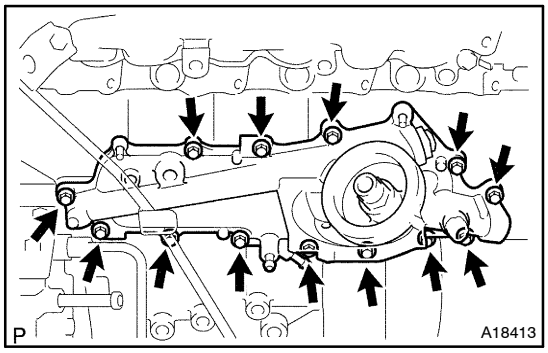

2. INSTALL OIL COOLER AND OIL COOLER COVER ASSEMBLY

(a) Install a new gasket, the oil cooler and oil cooler cover assembly with the 13 bolts.

Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)

(b) Install the No. 2 vacuum transmitting pipe with the 2 nuts.

Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)

3. INSTALL COMMON RAIL (See page FU–22)

4. INSTALL OIL FILTER (See page LU–2)

5. FILL WITH ENGINE COOLANT

6. START ENGINE AND CHECK FOR LEAKS

7. CHECK ENGINE OIL LEVEL