
LU0I7–03

REMOVAL

1. **DRAIN ENGINE OIL**
2. **REMOVE OIL PAN (See page LU–10)**

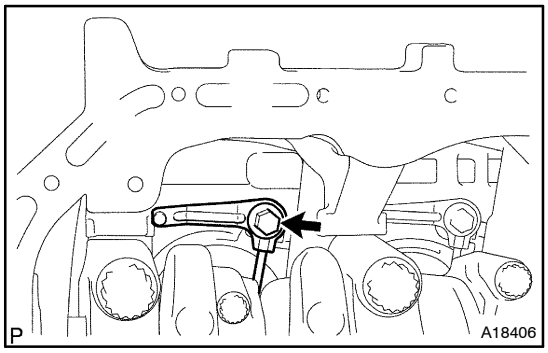

3. **REMOVE CHECK VALVE AND OIL NOZZLES**

Remove the 4 check valves and oil nozzles.