
LU0I9–03

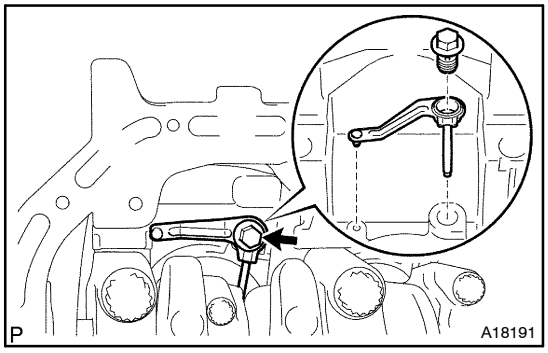

INSTALLATION

1. INSTALL OIL NOZZLES

(a) Align the pin of the oil nozzle with the pin hole of the cylinder block.

(b) Install the oil nozzle with the check valve. Install the 4 oil nozzles.

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

2. INSTALL OIL PAN (See page LU–14)

3. FILL WITH ENGINE OIL

4. START ENGINE AND CHECK FOR LEAKS