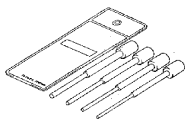


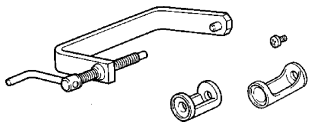
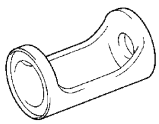






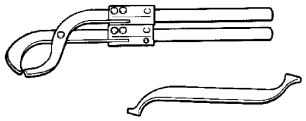



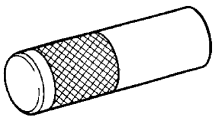
















ENGINE MECHANICAL









PP3UX–01

SST (Special Service Tools)

	09201–10000	Valve Guide Bushing Remover & Replacer Set	
	(09201–01060)	Valve Guide Bushing Remover & Replacer 6	
	09201–41020	Valve Stem Oil Seal Replacer	
	09202–70020	Valve Spring Compressor	
	09202–00020	Attachment	
	09213–58013	Crankshaft Pully Holding Tool	
	(90201–08131)	Washer	
	(91111–50845)	Bolt	
	09214–60010	Crankshaft Pulley & Gear Replacer	
	09214–76011	Crankshaft Pulley Replacer	Crankshaft front oil seal
	09222–76012	Connecting Rod Bushing Remover & Replacer	
	09223–00010	Cover & Seal Replacer	Supply pump drive gear bearing Crankshaft timing gear

	09223–15020	Oil Seal & Bearing Replacer	Supply pump drive gear oil seal Supply pump drive gear bearing
	09223–15030	Oil Seal & Bearing Replacer	Crankshaft rear oil seal
	09248–55050	Valve Clearance Adjust Tool Set	
	(09248–05510)	Valve Lifter Press	
	(09248–05520)	Valve Lifter Stopper	
	09308–10010	Oil Seal Puller	Crankshaft front oil seal
	09330–00021	Companion Flange Holding Tool	Crankshaft pulley
	09502–12010	Differential Bearing Replacer	Supply pump drive gear oil seal Supply pump drive gear bearing
	09608–06041	Front Hub Inner Bearing Cone Replacer	Camshaft oil seal
	09843–18030	Tacho–pulse Pickup Wire No.2	
	09950–40011	Puller B Set	
	(09951–04010)	Hanger 150	No. 1 camshaft
	(09951–04020)	Hanger 200	Supply pump drive gear bearing

	(09952–04010)	Slide Arm	No. 1 camshaft Supply pump drive gear bearing
	(09953–04020)	Center Bolt 150	No. 1 camshaft
	(09953–04030)	Center Bolt 200	Supply pump drive gear bearing
	(09954–04010)	Arm 25	No. 1 camshaft Supply pump drive gear bearing
	(09955–04061)	Claw No.6	No. 1 camshaft Supply pump drive gear bearing
	(09957–04010)	Attachment	Crankshaft front oil seal Supply pump drive gear bearing
	(09958–04011)	Holder	Supply pump drive gear bearing
	09950–50013	Puller C Set	
	(09951–05010)	Hanger 150	Crankshaft pulley Crankshaft timing pulley Supply pump drive gear
	(09952–05010)	Slide Arm	Crankshaft pulley Crankshaft timing pulley Supply pump drive gear
	(09953–05010)	Center Bolt 100	Crankshaft pulley Crankshaft timing pulley Supply pump drive gear
	(09953–05020)	Center Bolt 150	Crankshaft pulley
	(09954–05021)	Claw No.2	Crankshaft pulley Supply pump drive gear

	(09954–05051)	Claw No.5	Crankshaft timing pulley
	09950–60010	Replacer Set	
	(09951–00350)	Replacer 35	Crankshaft front oil seal
	(09951–00390)	Replacer 39	Supply pump drive gear bearing
	(09951–00460)	Replacer 46	Supply pump drive gear bearing
	(09952–06010)	Adapter	Supply pump drive gear bearing
	09950–70010	Handle Set	
	(09951–07100)	Handle 100	Supply pump drive gear oil seal Supply pump drive gear bearing Valve guide bushing Crankshaft rear oil seal
	09960–10010	Variable Pin Wrench Set	
	(09962–01000)	Variable Pin Wrench Arm Assy	Supply pump drive gear Idler Gear
	(09963–00700)	Pin 7	Idler gear
	(09963–01000)	Pin 10	Supply pump drive gear
	09992–00025	Cylinder Compression Check Gauge Set	

	(09992–00121) No. 4 Attachment	
	(09992–00211) Gauge Assy	