
TC047–01

REMOVAL


1. REMOVE PCV HOSE

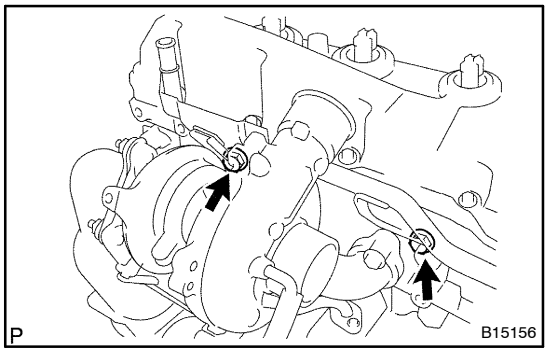

2. REMOVE WATER PIPE

(a) Disconnect the water hose.

(b) Remove the 2 bolts and disconnect the heter pipe.

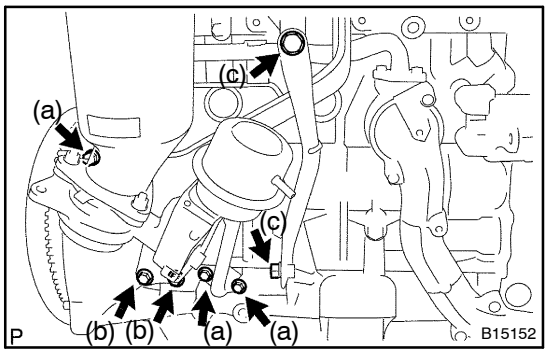


3. REMOVE TURBOCHARGER SUB–ASSY

(a) Remove the 2 bolts and union bolt and disconnect turbocharger oil pipe.

(b) Remove the 2 bolts and disconnect the turbine outlet elbow stay.


(c) Remove the 2 bolts and disconnect the turbo stay.

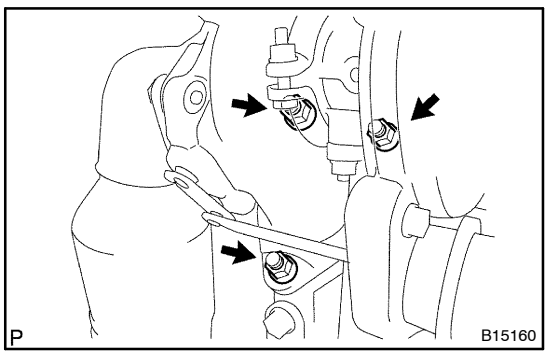

(d) Remove the 3 nuts, gasket and turbocharger assembly from the exhaust manifold.

4. REMOVE EXHAUST MANIFOLD CONVERTER

Remove the 4 nuts and gasket and disconnect the exhaust manifold converter.

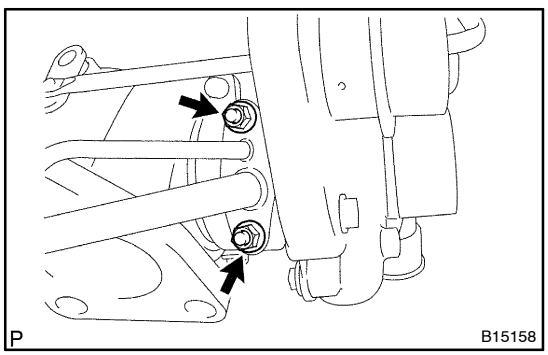

5. REMOVE TURBO OIL PIPE

Remove the 2 nuts and gasket and disconnect the turbocharger oil pipe.