
ENGINE (RCH series)

HOW TO PROCEED WITH TROUBLESHOOTING

DI4DW–20

When using the hand–held tester, troubleshooting in accordance with the procedure on the following page.

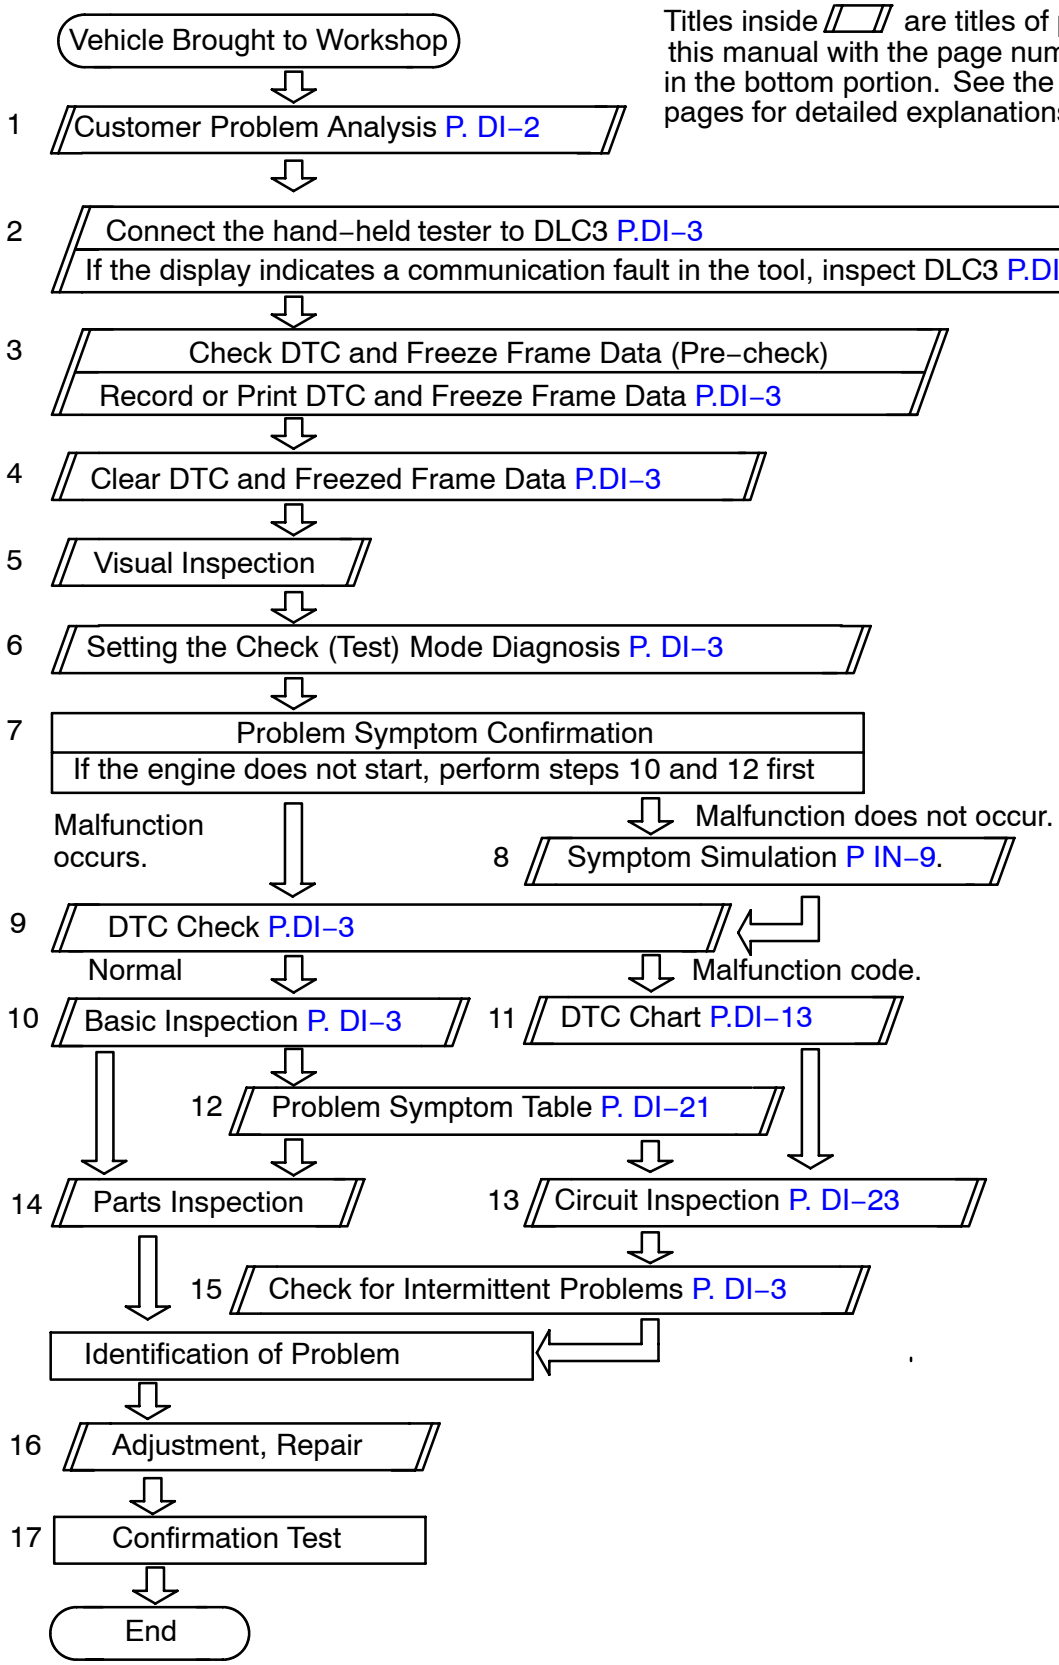

Titles inside ▱ are titles of pages in this manual with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.