
ENGINE (RZN series w/ Air Flow Meter)

HOW TO PROCEED WITH TROUBLESHOOTING

DI9T5–02


When using the hand–held tester, troubleshooting in accordance with the procedure on the following page.

Titles inside // are titles of pages in this manual with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

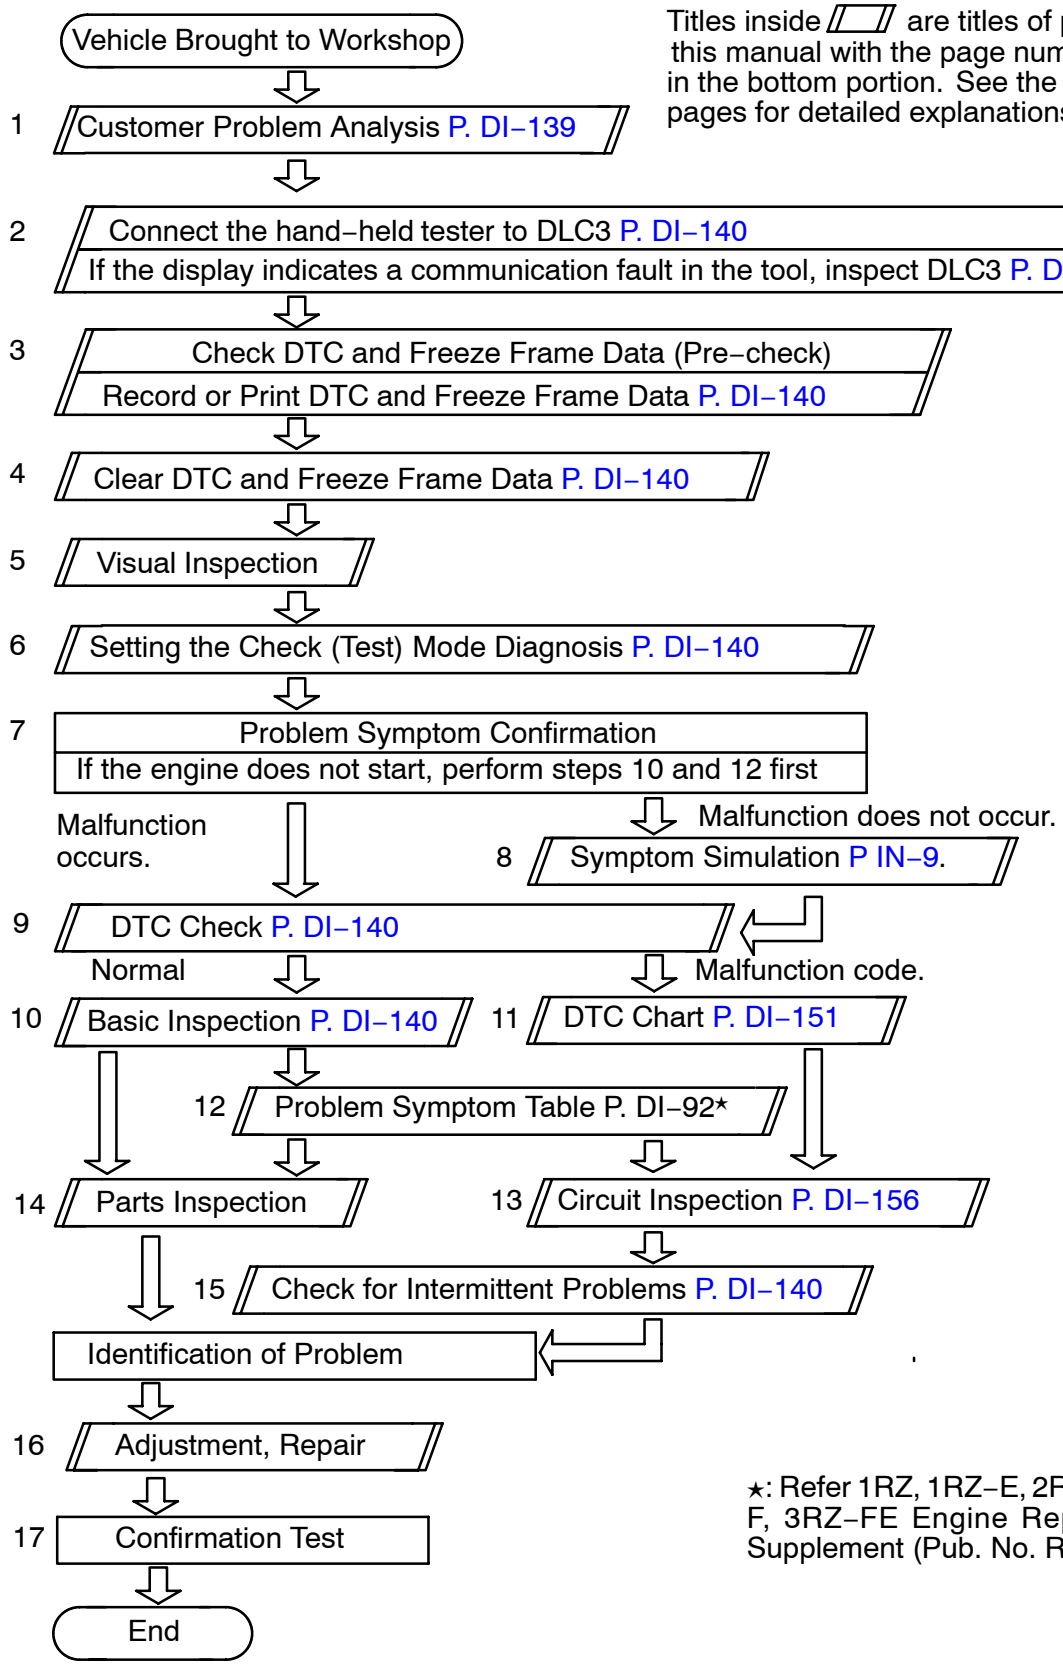

★: Refer 1RZ, 1RZ–E, 2RZ–FE, 3RZ–F, 3RZ–FE Engine Repair Manual Supplement (Pub. No. RM584E).

When not using the hand–held tester, troubleshooting in accordance with the procedure on the following pages.

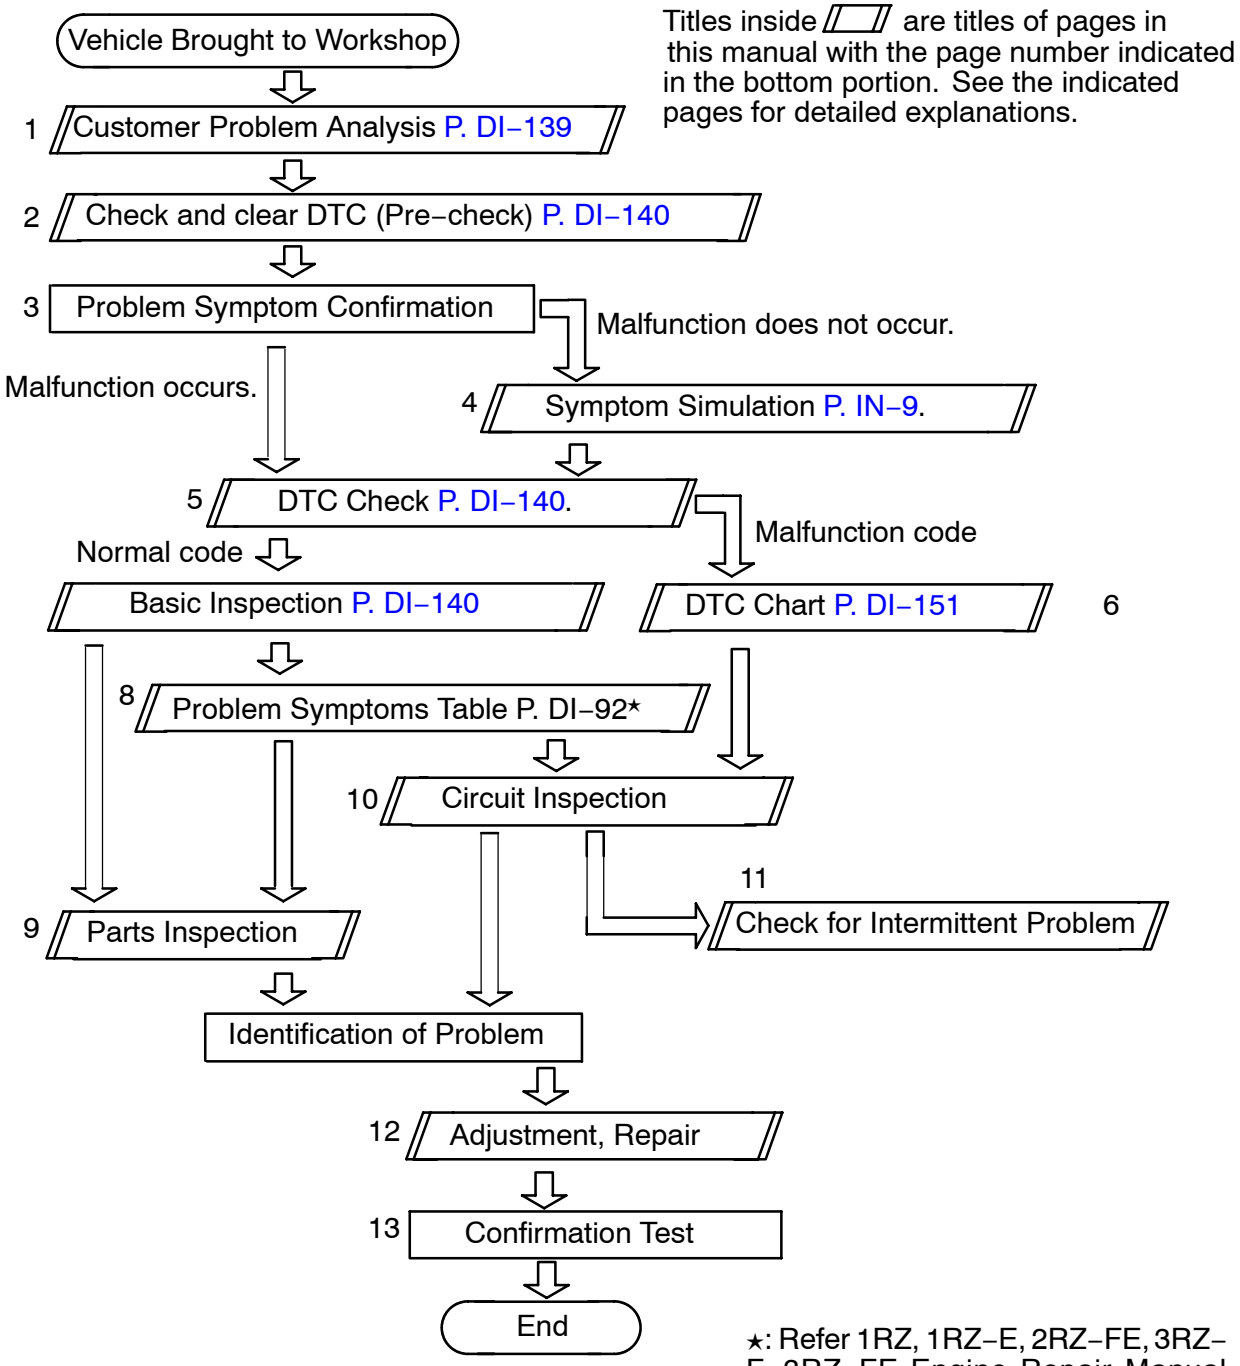

Titles inside ▱ are titles of pages in this manual with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

★: Refer 1RZ, 1RZ–E, 2RZ–FE, 3RZ–F, 3RZ–FE Engine Repair Manual Supplement (Pub. No. RM584E).