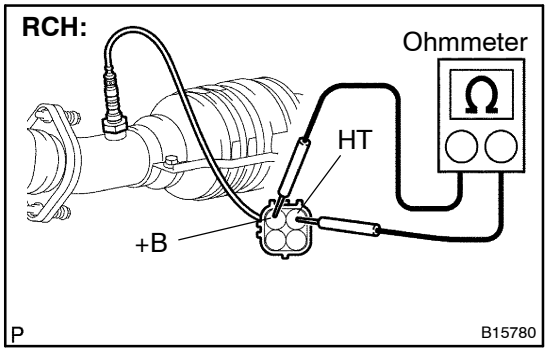


AIR–FUEL RATIO (A/F) SENSOR (Bank 1 Sensor 1)

FI0ZI–01

INSPECTION

CHECK HEATER RESISTANCE

(a) Disconnect the sensor connector.

(b) Measure the resistance between terminals +B and HT.

Standard:

Sensor temperature	Sensor resistance
20 °C (68 °F)	0.8 – 1.4 Ω
800 °C (1,472 °F)	1.8 – 3.2 Ω

If resistance is not as specified, replace the sensor.

Torque: 44 N·m (450 kgf·cm, 32 ft·lbf)

(c) Reconnect the sensor connector.