
EXHAUST GAS RECIRCULATION (EGR) GAS TEMPERATURE SENSOR

SF041–03

INSPECTION

1. **REMOVE EGR VALVE**
2. **REMOVE EGR GAS TEMPERATURE SENSOR**

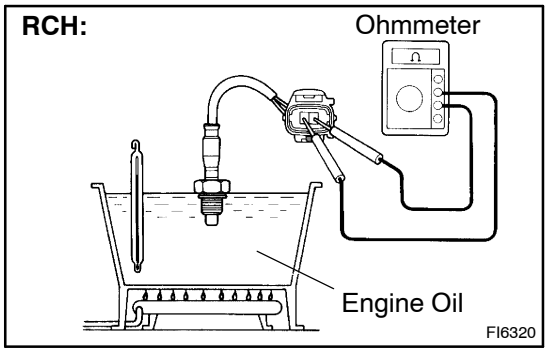

3. **INSPECT EGR GAS TEMPERATURE SENSOR**

Measure the resistance between the terminals.

Standard:

Engine oil temperature	Sensor resistance
50 °C (122 °F)	64 – 97 kΩ
100 °C (212 °F)	11 – 16 kΩ
150 °C (302 °F)	2 – 4 kΩ

If the resistance is not as specified, replace the sensor.

4. **REINSTALL EGR GAS TEMPERATURE SENSOR**
5. **REINSTALL EGR VALVE**