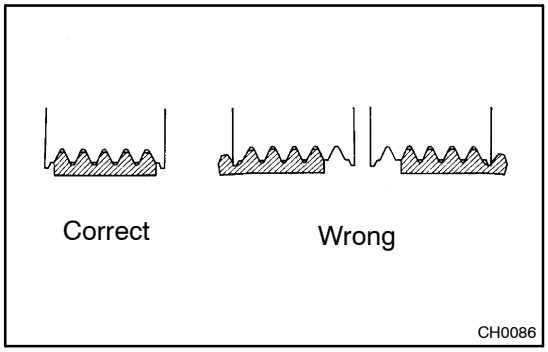



DRIVE BELT

AC3NH–01

ON–VEHICLE INSPECTION

1. INSPECT DRIVE BELT'S INSTALLATION CONDITION

Check that the drive belt fits properly in the ribbed grooves.

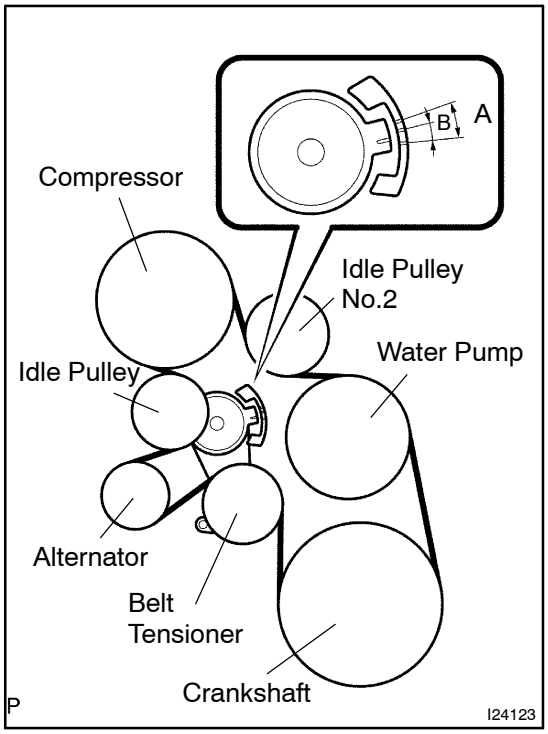

2. CHECK DRIVE BELT DEFLECTION

Check that the tension is within A range on the auto tensioner scale.

If the tension is not within the A range on the scale, replace the belt with a new one.

HINT:

When replacing the drive belt with a new one, the belt's tension should be within the B range on the belt tensioner scale.