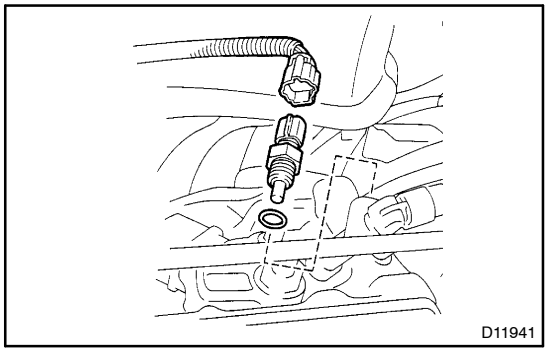


ATF TEMPERATURE SENSOR (2KD–FTV)

ON–VEHICLE REPAIR

AT10B–01

1. DISCONNECT ATF TEMPERATURE SENSOR CONNECTOR

2. REMOVE ATF TEMPERATURE SENSOR

(a) Remove the ATF temperature sensor.

(b) Remove the O–ring from the ATF temperature sensor.

3. INSTALL ATF TEMPERATURE SENSOR

(a) Coat a new O–ring with ATF and install it to the ATF temperature sensor.

(b) Install the ATF temperature sensor.
Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

4. CONNECT ATF TEMPERATURE SENSOR CONNECTOR

NOTICE:
Be careful not to twist the wire harness.

5. FILL ATF AND CHECK FLUID LEVEL
(See page DI–4)