
AT10F–01


INSTALLATION

1. CHECK TORQUE CONVERTER INSTALLATION

(a) Install the torque converter to the transmission housing.

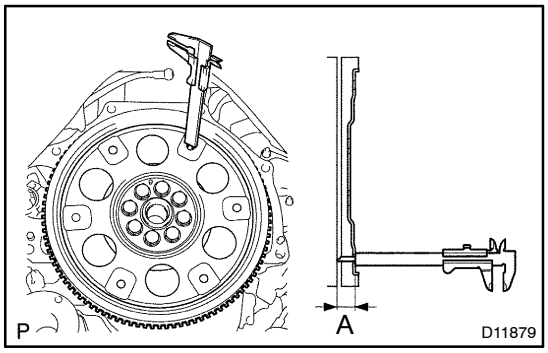

(b) Using vernier calipers, measure the dimension ”A” between the transmission fitting part and the converter fitting part of the drive plate.

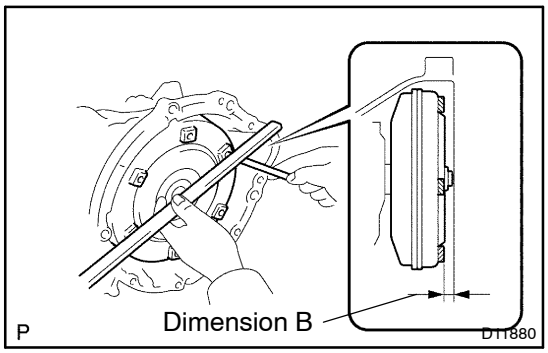

(c) Using calipers and a straight edge, measure the dimension B shown in the illustration and check that B is greater than A measured in (b).

Standard distance: A + 1 mm or more

2. TRANSMISSION INSTALLATION

Installation is in the reverse order of removal (See page AT–7).

HINT:

- After installation, adjust the neutral start switch.
- Fill ATF and check fluid level (See page DI–4).
- Do test to drive the vehicle.