

COMBINATION METER

CIRCUIT

BE2BK–01

w/o Tachometer :

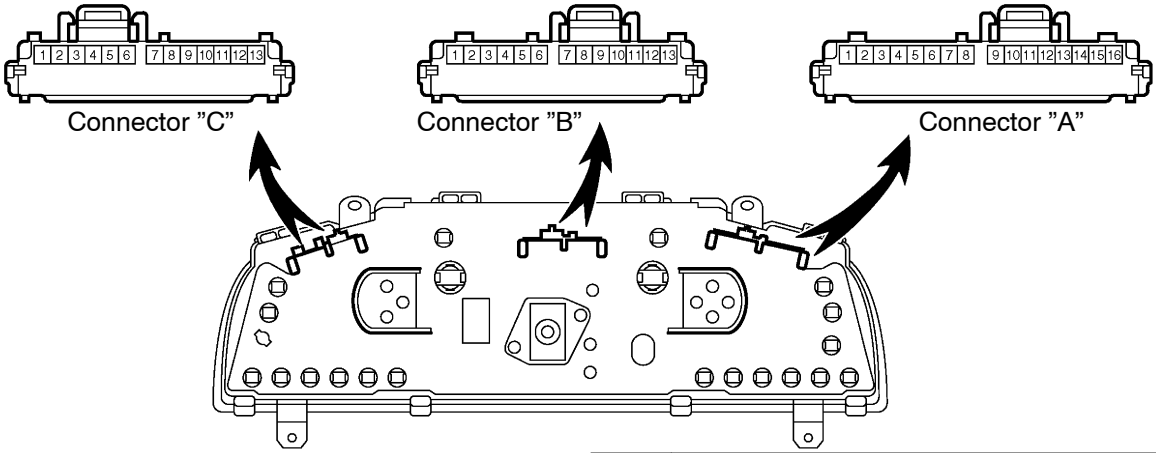

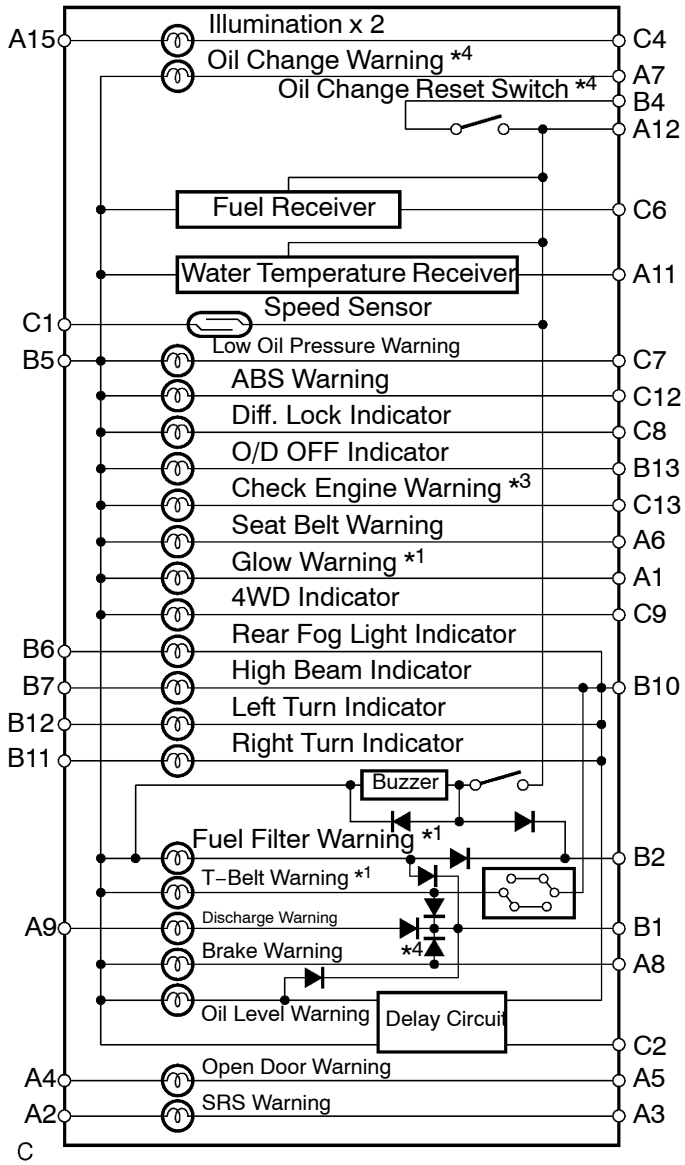



No.		Wire Harness Side
A	1	Pre–Heating Timer *1
	2	ECU–B Fuse
	3	Airbag Sensor Assembly *2
	4	DOME Fuse *2
	5	Door Courtesy Switch *2
	6	Seat Belt Buckle Switch *2
	7	Oil Monitor ECU *4
	8	Parking Brake Switch, Brake Fluid Level Warning Switch and Vacuum Switch
	9	IGN Fuse
	11	Water Temparature Sender Gauge
	12	Ground
	15	TAIL Fuse
B	1	Alternator L–Terminal
	2	Fuel Sedimentor *1
	4	Oil Monitor ECU *4
	5	GAUGE Fuse
	6	Rear Fog Light Switch *3, *4
	7	Light Control Switch
	10	Ground
	11	Turn Signal Switch (RH)
	12	Turn Signal Switch (LH)
	13	O/D OFF Switch (A/T)
C	1	Speed Control Unit
	2	Engine Oil Level Sensor *1
	4	Ground
	6	Fuel Sender Gauge
	7	Low Oil Pressure Warning Switch
	8	Rear Diff. Lock Control Switch
	9	4WD Indicator Switch
	12	ABS ECU
	13	Engine (& ECT) ECU *3

*1 : Diesel Engine
*2 : Except Europe Diesel Engine
*3 : Gasoline Engine
*4 : Europe 2KD–FTV

I23723

w/ Tachometer :

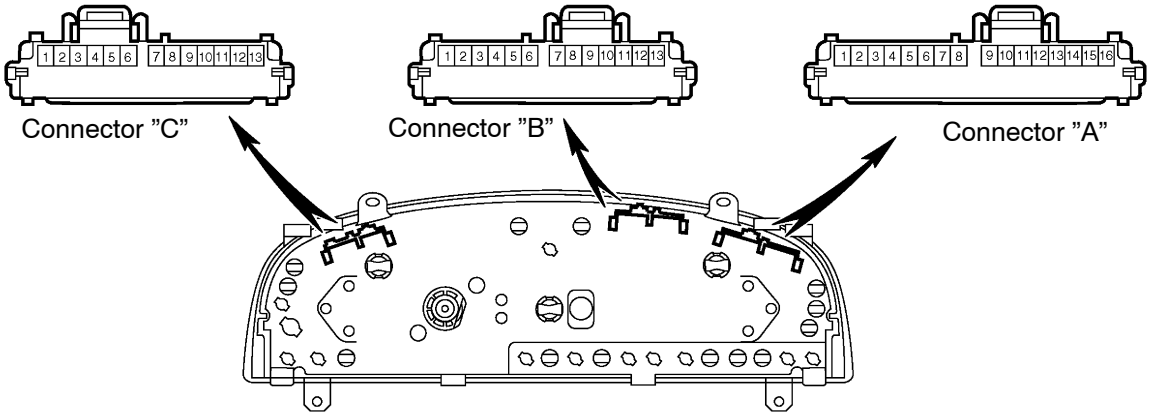

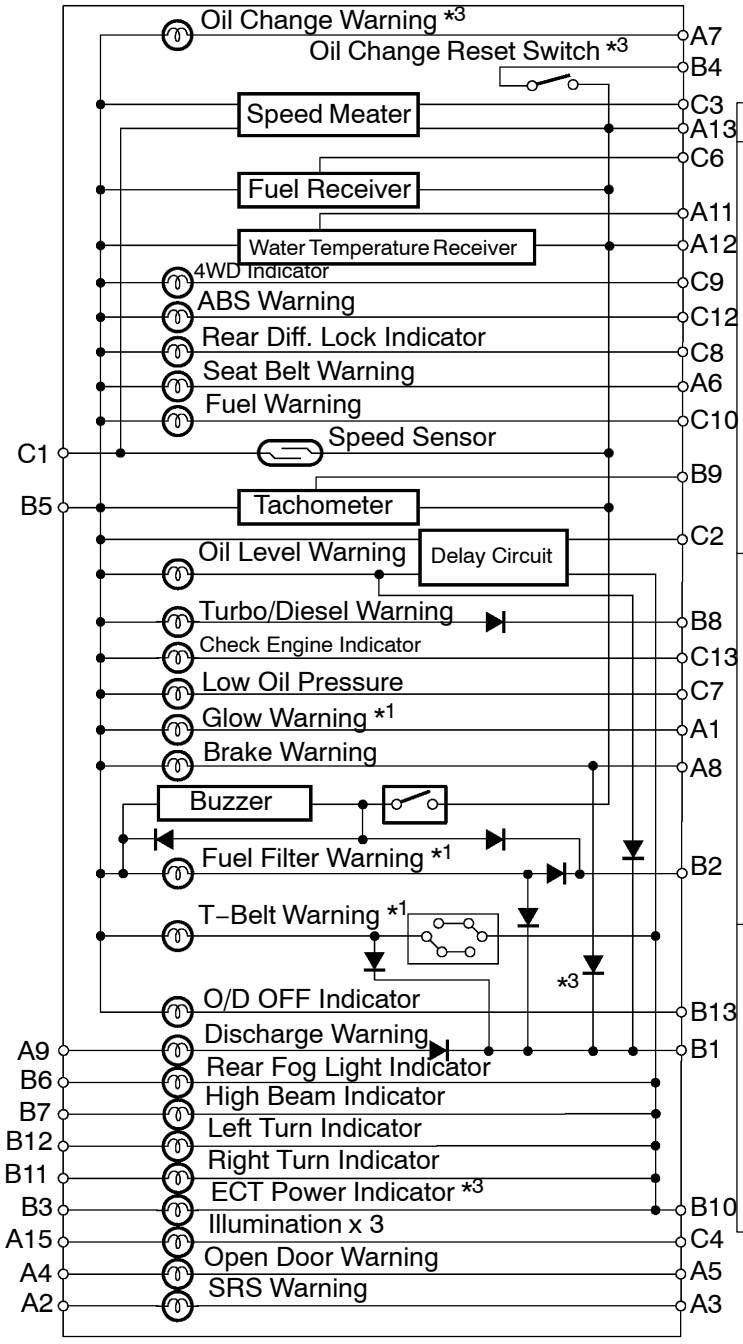


*1 : Diesel Engine
*2 : Gasoline Engine
*3 : Europe 2KD–FTV
*4 : 1KZ–TE, 5L–E


No.		Wire Harness Side
A	1	Pre–Heating Timer *1
	2	ECU–B Fuse
	3	Airbag Sensor Assembly
	4	DOME Fuse
	5	Door Courtesy Switch
	6	Seat Belt Buckle Switch
	8	Parking Brake Switch, Brake Fluid Level Warning Switch and Vacuum Switch
	7	Oil Monitor ECU *3
	9	IGN Fuse
	11	Water Temperature Sender Gauge
	12	Ground
	13	Speed Sensor *4
	15	TAIL Fuse
B	1	Alternator L–Terminal
	2	Fuel Sedimentor *1
	3	Engine (& ECT) ECU *3
	4	Oil Monitor ECU *3
	5	GAUGE Fuse
	6	Rear Fog Light Switch
	7	Light Control Switch
	8	Turbo Pressure Switch
	9	Igniter*2 or Pick–Up Sensor *1
	10	Ground
	11	Turn Signal Switch (RH)
	12	Turn Signal Switch (LH)
	13	O/D OFF Switch
C	1	Speed Control Unit
	2	Engine Oil Level Sensor
	3	Speed Sensor *4
	4	Ground
	6	Fuel Sender Gauge
	7	Low Oil Pressure Warning Switch
	8	Rear Diff. Lock Control Switch
	9	4WD Indicator Switch
	10	Fuel Sedimentor *1
	12	ABS ECU
	13	Engine (& ECT) ECU *2

I23965

CKD made 1KZ–TE, 2KD–FTV:

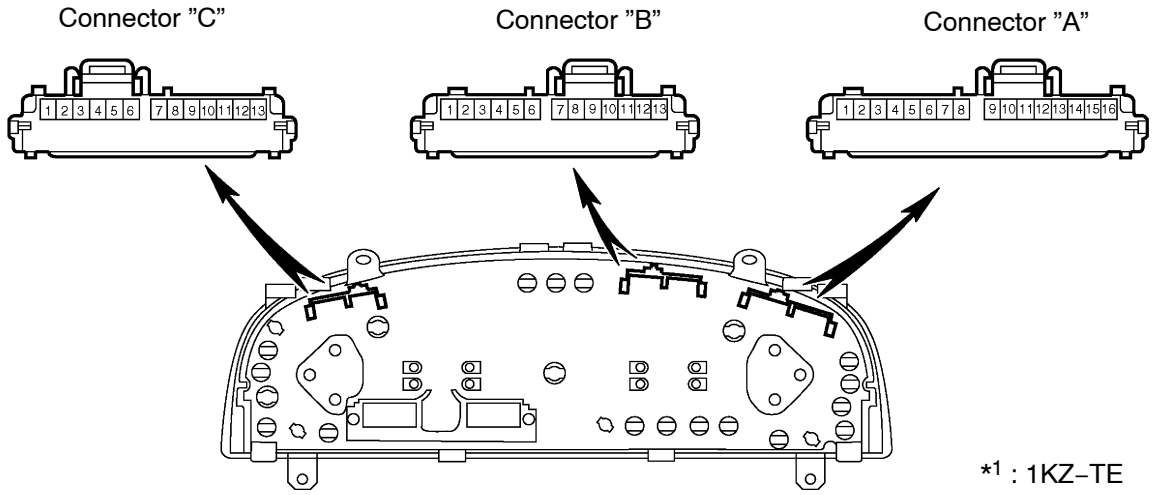

*1 : 1KZ–TE
*2 : 2KD–FTV

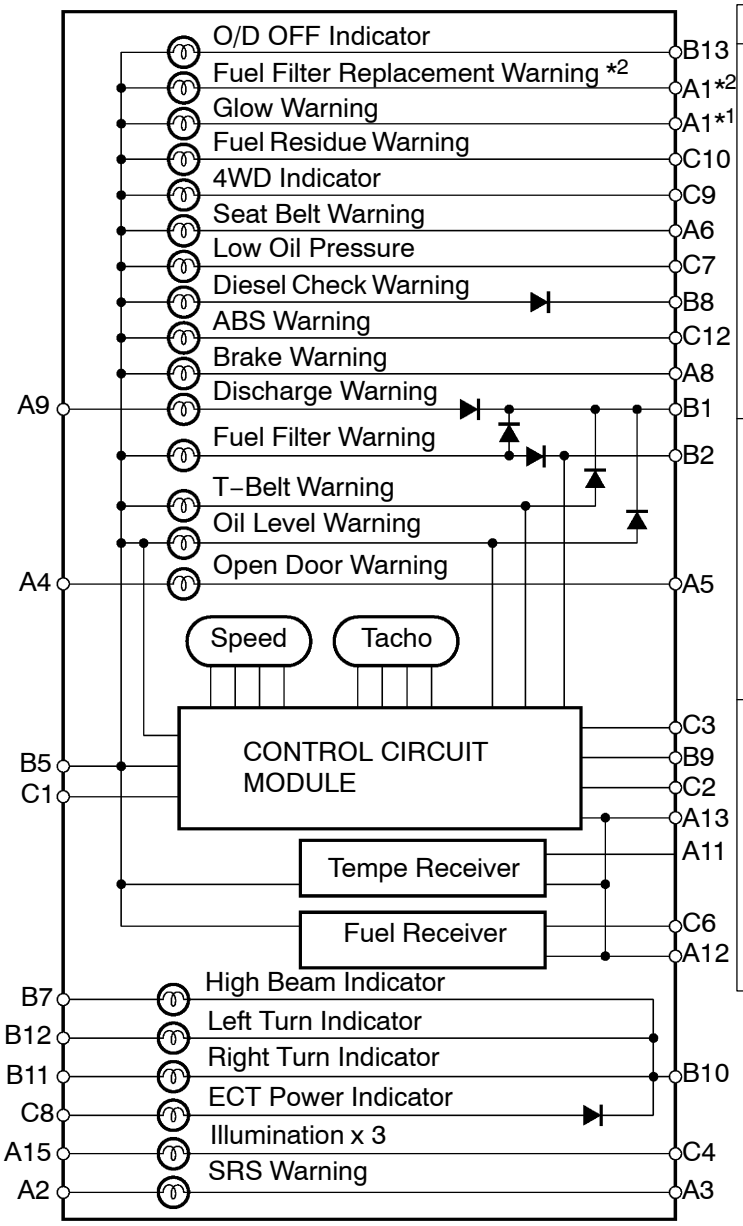

No.		Wire Harness Side
A	1	Pre–Heating Timer *1, Engine (& ECT) ECU *2
	2	ECU–B Fuse
	3	Airbag Sensor Assembly
	4	DOME Fuse
	5	Door Courtesy Switch
	6	Seat Belt Buckle Switch
	8	Parking Brake Switch, Brake Fluid Level Warning Switch and Vacuum Switch
	9	IGN Fuse
	11	Water Temperature Sender Gauge
	12	Ground
	15	TAIL Fuse
B	1	Alternator L–Terminal
	2	Fuel Sedimentor *1
	5	GAUGE Fuse
	7	Light Control Switch
	8	Turbo Pressure Switch
	9	Igniter
	10	Ground
	11	Turn Signal Switch (RH)
	12	Turn Signal Switch (LH)
	13	O/D OFF Switch
C	1	Speed Control Unit
	2	Engine Oil Level Sensor
	3	Speed Sensor
	4	Ground
	6	Fuel Sender Gauge
	7	Low Oil Pressure Warning Switch
	8	Engine (& ECT) ECU *2
	9	4WD Indicator Switch
	10	Fuel Sedimentor *1
	12	ABS ECU

C

I23722