
BO0J8–02

REMOVAL

1. One–touch type (w/ Hi–mounted stop light): REMOVE SERVICE HOLE COVER

Remove the 12 screws and service hole cover.

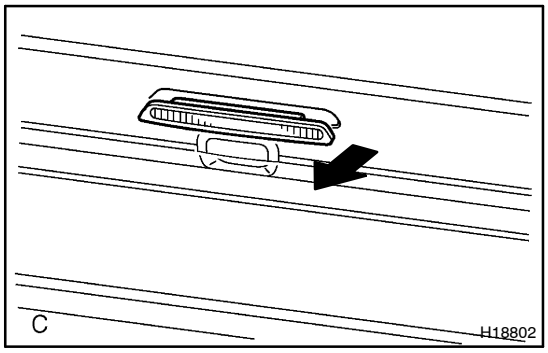


2. One–touch type (w/ Hi–mounted stop light): REMOVE HI–MOUNTED STOP LIGHT

(a) Using a screwdriver, remove the hi–mounted stop light.

HINT:

Tape the screwdriver tip before use.


(b) Disconnect the connecter.

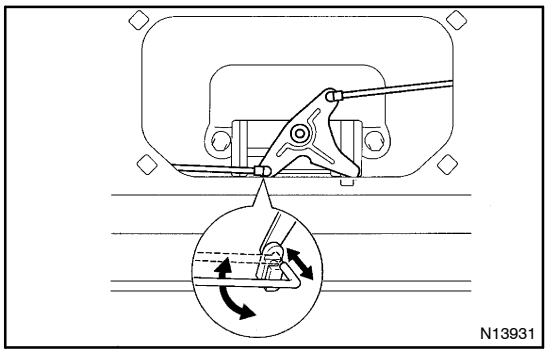

3. One–touch type: REMOVE TAIL GATE LOCK

(a) Disconnect the tail gate lock links from the tail gate lock control.

(b) Remove the 4 screws and 2 tail gate locks.

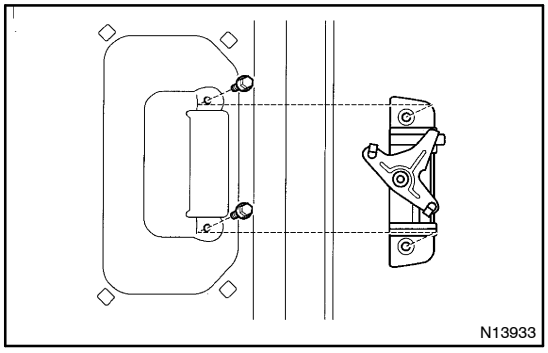

4. One–touch type: REMOVE TAIL GATE LOCK CONTROL


Remove the 2 screws and tail gate lock control.

5. One–touch type: REMOVE TAIL GATE LOCK STRIKER

Remove the 2 bolts and tail gate lock striker.

HINT:

Use the same manner described above to the other side.

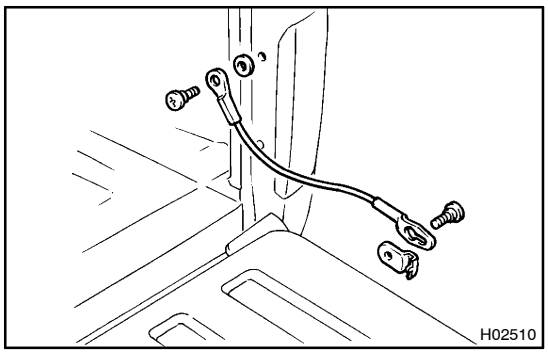

6. REMOVE TAIL GATE CABLE

(a) Remove the deck side shaft, tail gate cable and washer.

HINT:

Use the same manner described above to the other side.


(b) Remove the gate side shaft, tail gate cable and stopper.

HINT:

Use the same manner described above to the other side.

7. REMOVE TAIL GATE

(a) Remove the 2 bolts and tail gate.

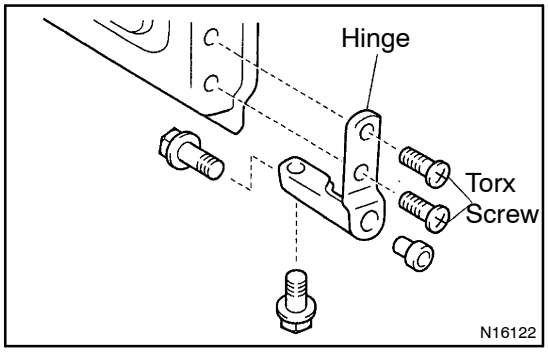

NOTICE:

Be careful not to drop the tail gate.

(b) Remove the 4 torx screws, 2 bolts and 2 tail gate hinges from the tail gate.