
BO4F9–01

INSTALLATION

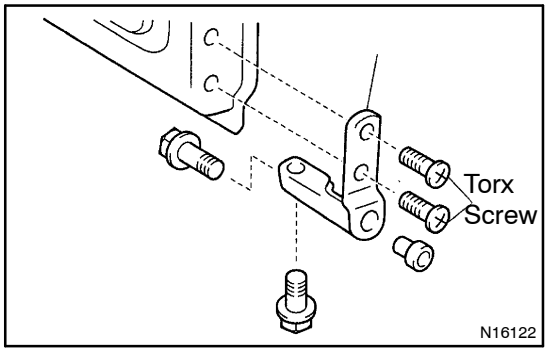

1. INSTALL TAIL GATE


(a) Install the tail gate hinges with the 4 torx screws and 2 bolts to the tail gate.

Torque:
torx screw: 28 N·m (290 kgf·cm, 21 ft·lbf)
bolt: 24 N·m (240 kgf·cm, 17 ft·lbf)

(b) Install the tail gate with the 2 bolts to the body.

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

NOTICE:
Be careful not to drop the tail gate.

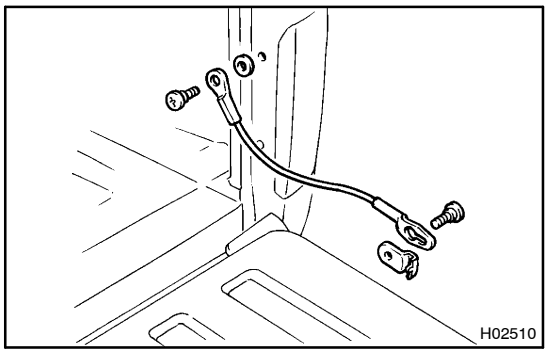

2. INSTALL TAIL GATE CABLE

(a) Install the stopper, tail gate cable and gate side shaft to the tail gate.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)

HINT:
Use the same manner described above to the other side.

(b) Install the washer, tail gate cable and deck side shaft to the body.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)


HINT:
Use the same manner described above to the other side.

3. One–touch type:
INSTALL TAIL GATE LOCK STRIKER

Install the tail gate lock striker with the 2 bolts.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)


HINT:
Use the same manner described above to the other side.

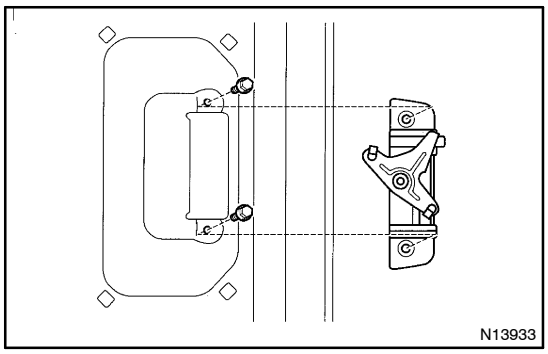

4. One–touch type:
INSTALL TAIL GATE LOCK CONTROL

Install the tail gate lock control with the 2 screws


Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

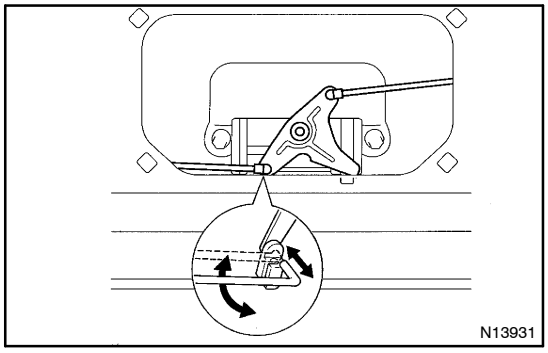

5. One–touch type:
INSTALL TAIL GATE LOCK

(a) Install the 2 tail gate locks with the 4 screws.
Torque: 12.5 N·m (125 kgf·cm, 9 ft·lbf)

(b) Connect the tail gate lock links to the tail gate lock control.

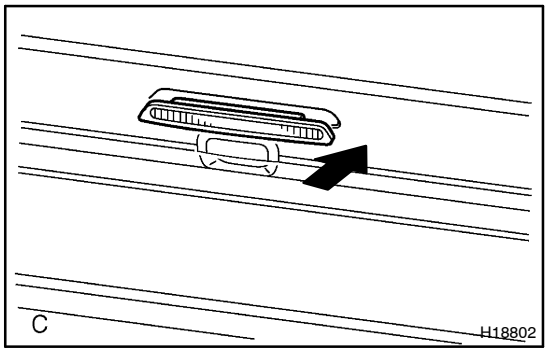

6. One–touch type (w/ Hi–mounted stop light):
INSTALL HI–MOUNTED STOP LIGHT

(a) Connect the connecter.

(b) Install the hi–mounted stop light.

7. One–touch type (w/ Hi–mounted stop light):
INSTALL SERVICE HOLE COVER

Install the service hole cover with the 12 screws.