
BR0FC–01

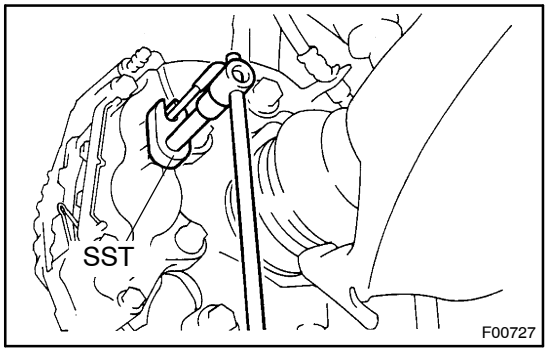

REMOVAL


1. REMOVE FRONT WHEEL

2. DISCONNECT BRAKE LINE

Using SST, disconnect the brake line. Use a container to catch the brake fluid.

SST 09023–00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

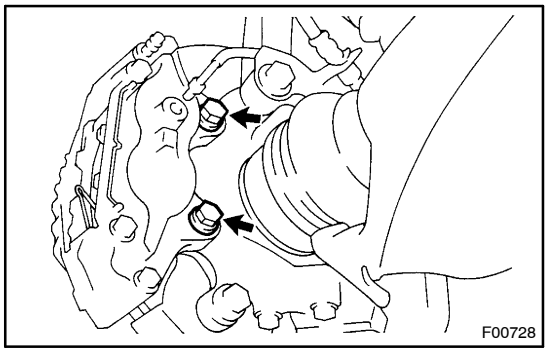

3. REMOVE CALIPER

Remove the 2 mounting bolts and caliper.

Torque: 123 N·m (1,250 kgf·cm, 90 ft·lbf)

4. REMOVE THESE PARTS:

- Clip
- 2 pins
- Anti–rattle spring
- 2 pads
- 4 anti–squeal shims