BR0G2–01

REMOVAL

1. DISCONNECT SPEED SENSOR CONNECTOR

2. REMOVE SPEED SENSOR

(a) 2WD:


Remove the 2 clamp bolts holding the sensor harness from the frame and upper arm.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

(b) 4WD:

Remove the 3 clamp bolts holding the sensor harness from the frame, upper arm and steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

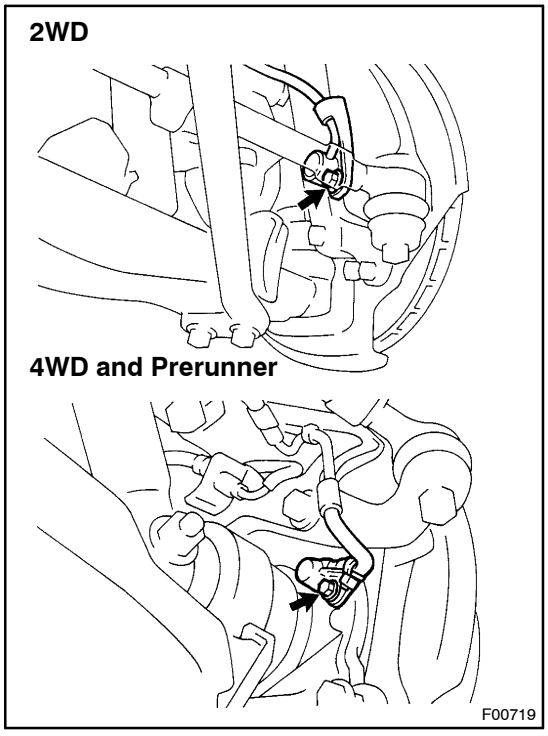

(c) Remove the bolt and speed sensor from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

NOTICE:

At the time of installation, please refer to the following items.

- **There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.**
- **The sensor is installed flat against the knuckle when you tighten the bolts.**