
CL004–08

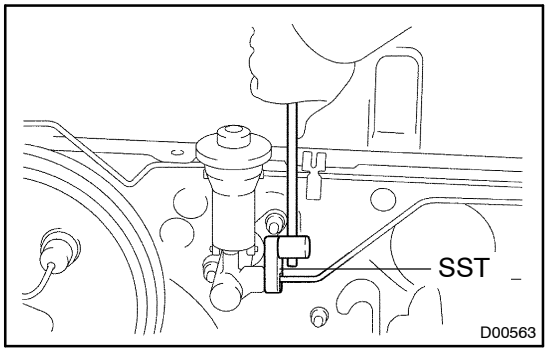

REMOVAL

1. DRAW OUT FLUID WITH SYRINGE

2. DISCONNECT CLUTCH LINE

Using SST, disconnect the line. Use a container to catch the fluid.

SST 09023–00100

Torque: 15.5 N·m (158 kgf·cm, 11 ft·lbf)

3. w/o TURN OVER CLUTCH:
REMOVE TENSION SPRING

4. REMOVE CLIP AND CLEVIS PIN

5. REMOVE MOUNTING NUTS AND PULL OUT MASTER CYLINDER

Torque: 14.2 N·m (145 kgf·cm, 10 ft·lbf)