
CL0E7–01

DISASSEMBLY

1. REMOVE CLEVIS AND BOOT

(a) Loosen the lock nut to remove the clevis and remove the lock nut.


(b) Remove the boot.

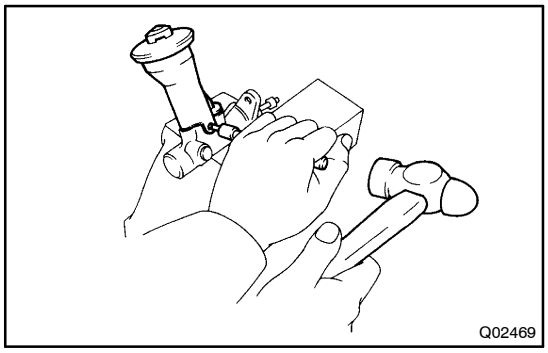

2. REMOVE RESERVOIR TANK

(a) Using a pin punch and hammer, drive out the slotted spring pin.

(b) Remove the reservoir tank and grommet.

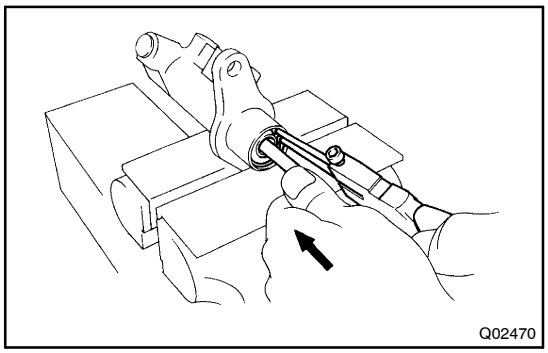

3. REMOVE PUSH ROD

(a) While pushing the push rod, using snap ring pliers, remove the snap ring.

(b) Remove the push rod and washer.

4. REMOVE PISTON WITH SPRING