
CL0E8–01

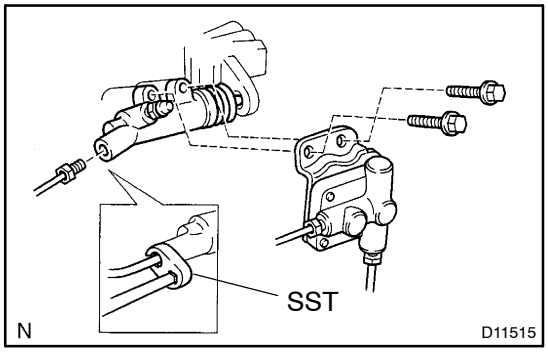

REMOVAL

1. DISCONNECT CLUTCH LINE

Using SST, disconnect the line. Use a container to catch the fluid.

SST 09023–00100

Torque: 15.5 N·m (158 kgf·cm, 11 ft·lbf)

2. REMOVE 2 BOLTS, DISCONNECT CLUTCH ACCUMULATOR AND PULL OUT RELEASE CYLINDER

Torque: 11.7 N·m (119 kgf·cm, 9 ft·lbf)