
CL0C1–02

DISASSEMBLY

1. PULL OUT BOOT WITH PUSH ROD

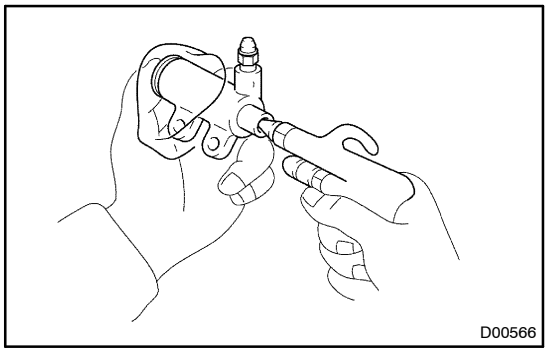

2. REMOVE PISTON

Using compressed air, remove the piston with the spring from the cylinder.

3. REMOVE BLEEDER PLUG AND CAP