
CL0C5–02

REMOVAL

1. REMOVE TRANSMISSION FROM ENGINE

G50 M/T: See page MT–2

R151F M/T: See page MT–2

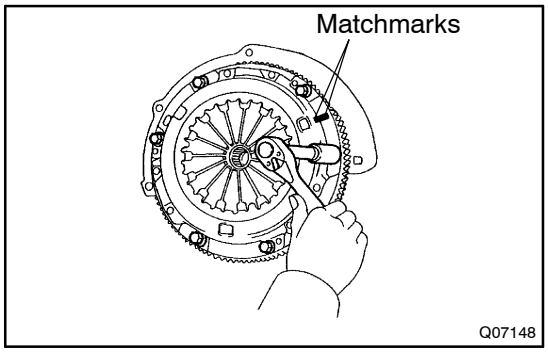

2. REMOVE CLUTCH COVER AND DISC


(a) Place matchmarks on the flywheel and clutch cover.

(b) Loosen each set bolt one turn at a time until spring tension is released.

(c) Remove the set bolts, and pull off the clutch cover with the clutch disc.

NOTICE:

Do not drop the clutch disc.

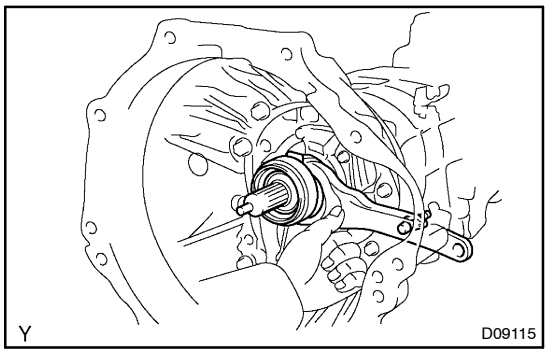

3. REMOVE BOOT, RELEASE BEARING AND FORK FROM TRANSMISSION

(a) Remove the boot to the transmission.

(b) Remove the release bearing together with the fork and then separate them.

(c) Remove the clip from the release bearing.