
ANTI–LOCK BRAKE SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

DI0Q6–09

Troubleshooting in accordance with the procedure on the following pages.

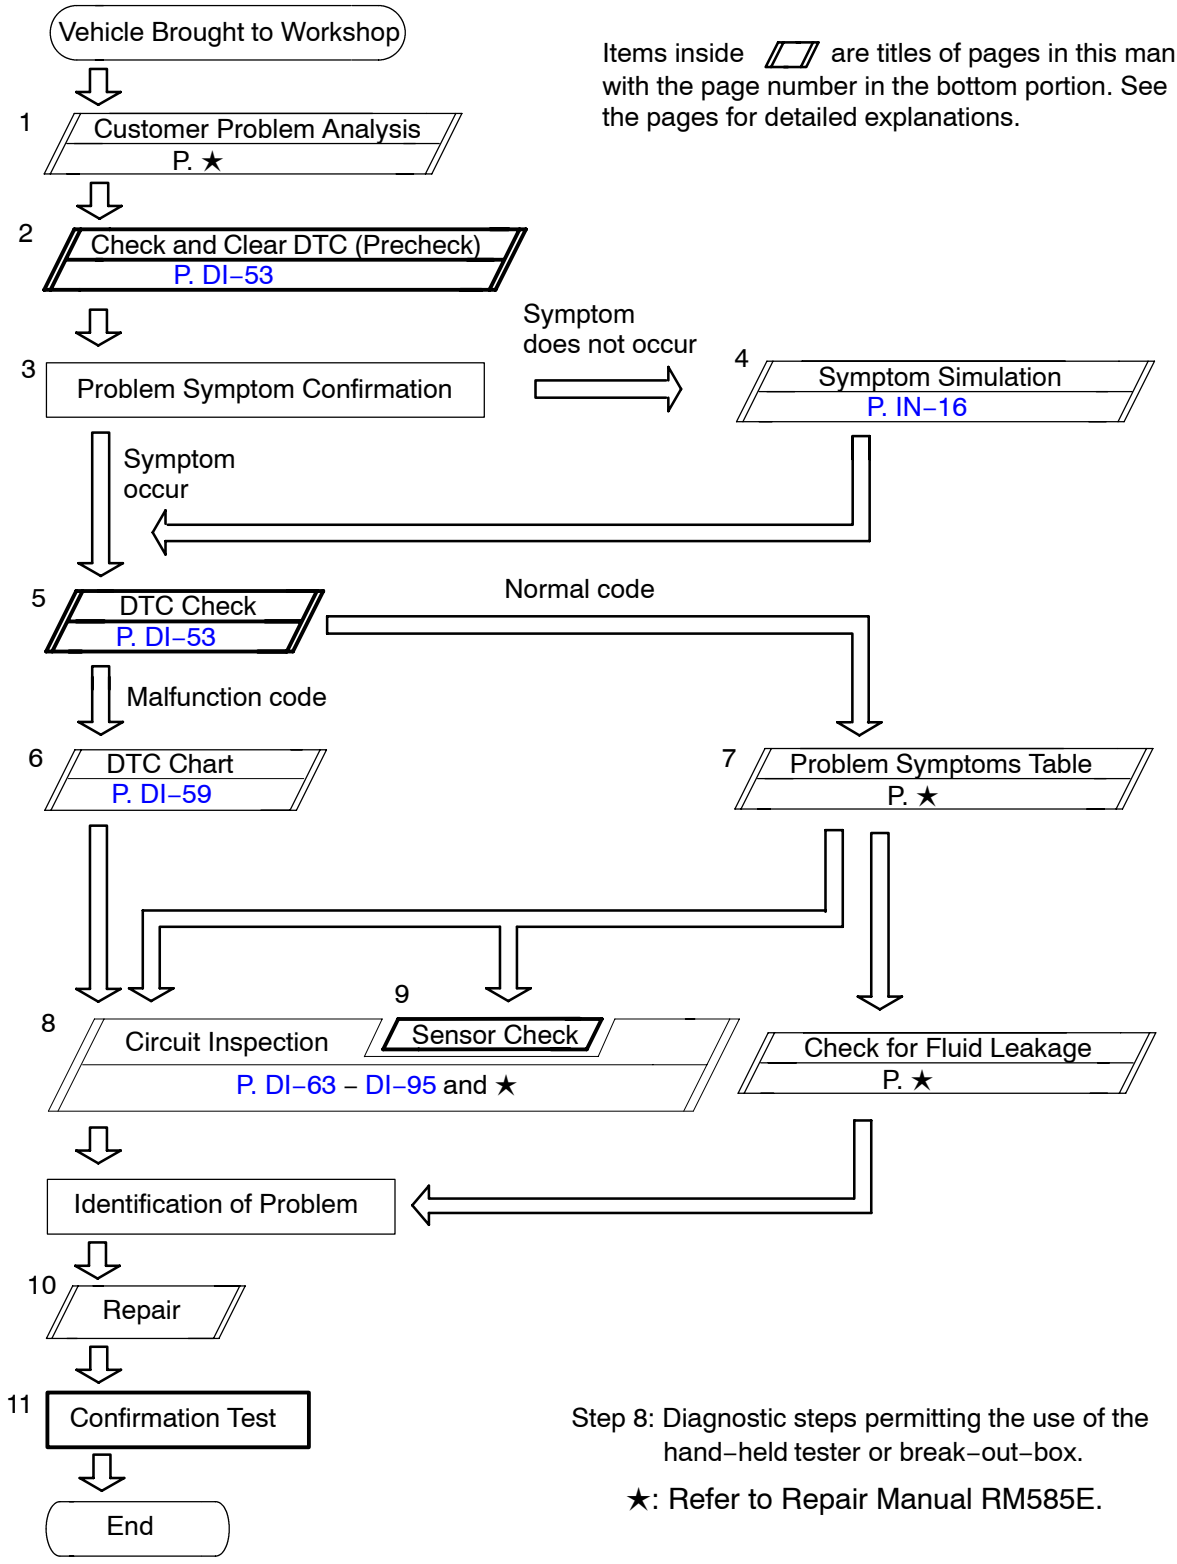

Items inside ▱ are titles of pages in this manual, with the page number in the bottom portion. See the pages for detailed explanations.

Step 8: Diagnostic steps permitting the use of the hand–held tester or break–out–box.

★: Refer to Repair Manual RM585E.