SR1HP–02

REMOVAL


1. REMOVE ENGINE UNDER COVER

Remove the 4 bolts and engine under cover.

2. DRAIN POWER STEERING FLUID

3. DISCONNECT SUCTION HOSE

Remove the clamp and disconnect the suction hose.

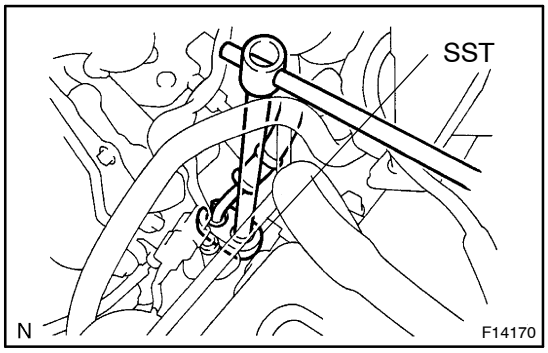

4. DISCONNECT PRESSURE FEED TUBE

Using SST, disconnect the pressure feed tube.

SST 09023–12700

5. REMOVE PS VANE PUMP ASSEMBLY

(a) Remove the 2 nuts and PS vane pump assembly.

(b) Remove the O–ring.