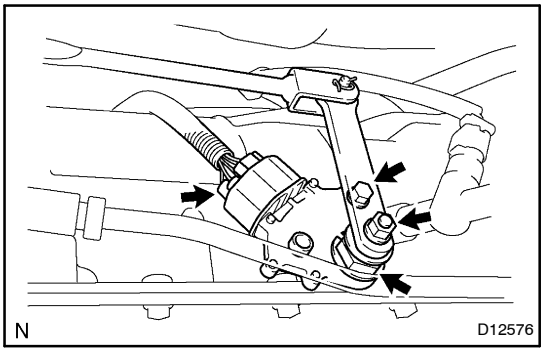


NEUTRAL START SWITCH

AT11C–01

ON–VEHICLE REPAIR

1. REMOVE NEUTRAL START SWITCH

(a) Disconnect the neutral start switch connector.
(b) Remove the nut and shift rod.
(c) Pry off the lock washer and remove the nut.
(d) Remove the bolt and neutral start switch.

2. INSTALL NEUTRAL START SWITCH

(a) Install the neutral start switch with the bolt.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
(b) Install a new lock plate and nut.
Torque: 6.9 N·m (70 kgf·cm, 61 in.·lbf)
(c) Bend the claws on the lock plate to fix the nut.
(d) Adjust the neutral start switch
(See page DI–4).
(e) Connect the neutral start switch connector.