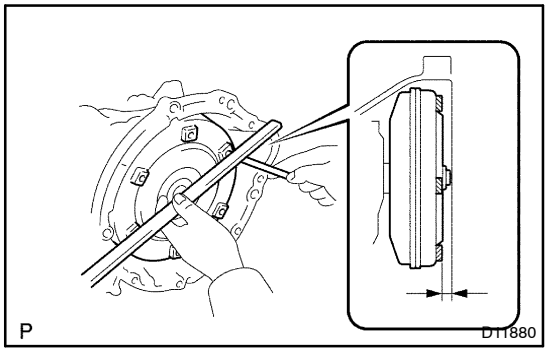


AUTOMATIC TRANSMISSION UNIT

AT11H–01

INSTALLATION

1. CHECK TORQUE CONVERTER INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter.

Correct distance: More than 17.95 mm (0.7067 in.)

2. INSTALL TRANSMISSION

Installation is in the reverse order of removal
(See page AT–6)

HINT:

- After installation, adjust the shift lever position and throttle cable (See page DI–4).
- Fill and check fluid level (See page DI–4).